



Uconnect™ 5" Radio Nav

NITRO



TABLE OF CONTENTS

INTRODUCTION	5	AM/FM RADIO STATION TUNING	19
TIPS, CONTROLS AND GENERAL INFORMATION	6	DAB RADIO	20
TIPS	6	SETTING THE PRESELECTIONS	20
MULTIMEDIA DEVICES: SUPPORTED AUDIO FILES AND FORMATS	8	AUDIO	21
NOTES ON TRADEMARKS	8	MEDIA MODE	23
EXTERNAL AUDIO SOURCES	9	TRACK CHANGE (previous/next)	23
ANTI-THEFT PROTECTION	9	TRACK FAST FORWARD/REWIND	23
SAFETY SETTINGS	10	TRACK SELECTION (Browse)	23
NAVIGATION ACTIVATION	10	AUDIO SOURCE SELECTION	24
GPS RECEPTION (Global Positioning System)	10	TRACK INFORMATION DISPLAY	24
SOFTWARE UPDATES	11	RANDOM TRACK REPRODUCTION	24
MAP UPDATE	11	TRACK REPETITION	24
ASSISTANCE FOR USING THE NAVIGATION SYSTEM	11	CD PLAYER	24
IMPORTANT INFORMATION ON COPYRIGHTS	11	LOADING/EJECTING A CD	24
TECHNICAL SPECIFICATIONS	12	SOURCE Bluetooth®	25
QUICK REFERENCE GUIDE	13	PAIRING A Bluetooth® AUDIO DEVICE	25
CONTROLS ON FRONT PANEL	13	USB/iPod SUPPORT	26
FRONT PANEL CONTROL SUMMARY TABLE	14	AUX SUPPORT	27
STEERING WHEEL CONTROLS	15	PHONE MODE	27
DESCRIPTION	15	PHONE MODE ACTIVATION	27
STEERING WHEEL CONTROL SUMMARY TABLE	16	MAIN FUNCTIONS	27
SWITCHING THE SYSTEM ON/OFF	17	DISPLAYED INFORMATION	28
RADIO (TUNER) MODE	17	PAIRING A MOBILE PHONE	28
RADIO MODE SELECTION	17	STORING NAMES/NUMBERS IN THE MOBILE PHONE	
SELECTING A FREQUENCY BAND	17	PHONEBOOK	29
DISPLAYED INFORMATION	18	CONNECTION/DISCONNECTION OF A MOBILE PHONE OR A	
RADIO STATION SELECTION	18	Bluetooth® AUDIO DEVICE	29
PREVIOUS/NEXT RADIO STATION SEARCH	18	DELETION OF A MOBILE PHONE OR A	
PREVIOUS/NEXT RADIO STATION FAST SEARCH	18	Bluetooth® AUDIO DEVICE	30

SETTING A MOBILE PHONE OR A Bluetooth®		DRIVING VIEW	44
AUDIO DEVICE AS FAVOURITE	30	ABOUT DRIVING VIEW	44
TRANSMISSION OF PHONE DATA		DRIVING VIEW	44
(PHONEBOOK AND RECENT CALLS)	31	DRIVING VIEW SYMBOLS	45
DELETION OF PHONE DATA		ABOUT REPLANNING SETTINGS	45
(PHONEBOOK AND RECENT CALLS)	31	ADVANCED LANE GUIDANCE	46
MAKING A PHONE CALL	31	ABOUT LANE GUIDANCE	46
MANAGING AN INCOMING CALL	32	USING LANE GUIDANCE	46
MAKING A SECOND PHONE CALL	33	CHANGING YOUR ROUTE	47
MANAGING TWO PHONE CALLS	33	MAKING CHANGES TO YOUR ROUTE	47
ENDING A CALL	33	CHANGE ROUTE MENU	47
REDIALLING	33	ABOUT WAYPOINTS	48
CONTINUING A PHONE CALL	33	ADDING THE FIRST WAYPOINT TO YOUR ROUTE	48
ACTIVATION/DEACTIVATION OF THE MICROPHONE	34	ADDING FURTHER WAYPOINTS TO YOUR ROUTE	49
TRANSFERRING A CALL	34	CHANGING THE ORDER OF WAYPOINTS	49
SMS MESSAGE READER	34	DELETING A WAYPOINT	49
SMS MESSAGE OPTIONS	34	REACTIVATING A WAYPOINT	50
"MORE" MODE	35	VIEW MAP	50
CLOCK	35	ABOUT VIEWING THE MAP	50
COMPASS	35	VIEW MAP	51
EXTERNAL TEMPERATURE	35	OPTIONS	51
TRIP COMPUTER	35	SETTINGS	52
SETTINGS	36	ABOUT SETTINGS	52
PLANNING A ROUTE	38	2D/3D SETTINGS	52
SAFETY/LEGAL NOTICE	38	ADVANCED SETTINGS	52
PLANNING A ROUTE	39	CAR SYMBOL	53
ROUTE SUMMARY	41	FAVOURITES	53
ALTERNATIVE ROUTES	41	GPS STATUS	53
SELECTING A ROUTE TYPE	41	HOME LOCATION	54
USING ARRIVAL TIMES	42	KEYBOARD	54
NAVIGATION MENU OPTIONS	42	MAKE YOUR OWN MENU	54
PLANNING A ROUTE IN ADVANCE	43	MANAGE POIs	54
VIEWING ROUTE INFORMATION	43	MAP COLOURS	55

ME AND MY NAVIGATION	55	MINIMISING DELAYS	64
RESET FACTORY SETTINGS	55	MAKING COMMUTING TO WORK EASIER	64
ROUTE PLANNING	55	GETTING MORE INFORMATION ABOUT AN INCIDENT	65
SAFETY SETTINGS	56	CHECKING TRAFFIC INCIDENTS IN YOUR AREA	66
SHOW POI ON MAP	56	CHANGING TRAFFIC SETTINGS	66
STATUS BAR	56	INCIDENTS	66
SWITCH MAP	56	TRAFFIC MENU	67
TURN OFF VOICE GUIDANCE / TURN ON VOICE GUIDANCE	57	SPEED CAMERAS	68
UNITS	57	SPEED CAMERA INFORMATION	68
USE NIGHT COLOURS / USE DAY COLOURS	57	SPEED CAMERA WARNINGS	68
VOICES	57	CHANGING THE WAY YOU ARE WARNED	68
START	57	SPEED CAMERA SYMBOLS	69
NAVIGATION UPDATES	57	REPORT BUTTON	69
POINTS OF INTEREST	58	REPORTING A NEW SPEED CAMERA WHILE ON THE MOVE	70
ABOUT POINTS OF INTEREST	58	REPORTING A NEW SPEED CAMERA AT A LATER TIME	70
CREATING POINTS OF INTEREST	58	REPORTING ALERTS FOR CAMERAS THAT ARE NOT LONGER THERE	70
USING POINTS OF INTEREST TO PLAN A ROUTE	59	TYPES OF FIXED SPEED CAMERA YOU CAN REPORT	70
SHOWING POINTS OF INTEREST ON THE MAP	59	AVERAGE SPEED CHECK CAMERA ALERTS	71
SETTING WARNINGS FOR POINTS OF INTEREST	60	SPEED CAMERAS MENU	71
MANAGING POINTS OF INTEREST	60	MAP UPDATE	72
HELP	61	UPDATING THE SYSTEM'S MAP	72
ABOUT GETTING HELP	61	PREPARING A USB DEVICE	72
USING HELP TO PHONE A LOCAL SERVICE	61	TomTom HOME INSTALLATION	74
HELP MENU OPTIONS	61	DOWNLOAD THE MAP	74
FAVOURITES	62	INSTALLING THE MAP	75
ABOUT FAVOURITES	62	TROUBLESHOOTING	76
USING A FAVOURITE	62	VOICE COMMANDS	77
CHANGING THE NAME OF A FAVOURITE	62	INFORMATION ON VOICE COMMANDS	77
DELETING A FAVOURITE	62	VOLUME LEVEL ADJUSTMENT	77
TRAFFIC	63	USE OF THE VOICE COMMANDS	77
ABOUT RDS-TMC	63	USE OF STEERING WHEEL CONTROLS TO ACTIVATE VOICE COMMANDS	78
USING TRAFFIC INFORMATION	63		
TAKING THE FASTEST ROUTE	63		

VOICE SESSION STATUS.....	79	MEDIA VOICE COMMANDS.....	89
MULTIPLE CHOICE	79	NAVIGATION VOICE COMMANDS.....	92
GLOBAL VOICE COMMANDS.....	80	CUSTOMER SERVICE NUMBER LIST.....	93
PHONE VOICE COMMANDS.....	81		
RADIO AM/FM/DAB VOICE COMMANDS.....	87		

INTRODUCTION

The car is equipped with an infotematic system designed according to the specific characteristics of the passenger compartment, with a customised design that matches the style of dashboard.

The system is installed in an ergonomic position for the driver and passenger, and controls can be quickly located from the graphical display on the front, making the device easy to use.

To increase protection against theft, the system has a protection system that only allows it to be used on the vehicle in which it was originally fitted.

The instructions for use are given below and we recommend you read them carefully and always keep them to hand (for example, in the glove compartment).

Enjoy reading. Happy motoring!

The information in this publication is provided by way of example. Fiat Group Automobiles S.p.A. can modify the specifications of the vehicle model described in this publication at any time, for technical or marketing purposes. For further information, contact Alfa Romeo Authorised Services.

TIPS, CONTROLS AND GENERAL INFORMATION



Follow the safety rules here below: otherwise serious injuries may occur to the occupants or the system may be damaged.

TIPS

Road safety

Learn how to use the various system functions before setting off.
Read the instructions for the system carefully before setting off.



If the volume is too loud this can be dangerous. Adjust the volume so that you can still hear background noises (e.g. horns, ambulances, police vehicles, etc.).

Reception conditions

Reception conditions change constantly while driving. Reception may be interfered with by the presence of mountains, buildings or bridges, especially when you are far away from the broadcaster.

IMPORTANT The volume may be increased when receiving traffic alerts and news.

Care and maintenance

Observe the following precautions to ensure the system is fully operational:

- ☐ the display is sensitive to scratching, liquids and detergents. The display should not come into contact with pointed or rigid objects which could damage its surface. Do not press on the display when cleaning it.
- ☐ prevent any liquid from entering the system: this could be damaged beyond repair.



Only clean the front panel and the display with a soft, clean, dry, anti-static cloth. Cleaning and polishing products may damage the surface. Do not use alcohol or similar products to clean the panel or the display.

Important information

If there is a problem, the system should only be checked and repaired at an Alfa Romeo Authorised Service Centre.

If the temperature is particularly low, the display may take a while to reach optimum brightness.

If the car is stopped for a while and the external temperature is very high, the system may go into "thermal protection" mode, suspending operation until the temperature in the passenger compartment returns to acceptable levels.

CD

The presence of dirt, scratches or distortions on the CDs may cause skipping while it is playing and poor sound quality. For optimal playback conditions, follow these guidelines:

- ☐ only use CDs with the following mark:



- ☐ clean every CD thoroughly removing any fingerprints or dust using a soft cloth. Hold CDs by the outer circumference and clean them from the centre towards the edge;
- ☐ never use chemical products (e.g. antistatic, thinner or spray cans) for cleaning as they could damage the surface of the CDs;
- ☐ after listening to them place CDs back in their cases to avoid them being damaged;
- ☐ do not expose CDs to direct sunlight, high temperatures or moisture for long periods;
- ☐ do not stick labels on the surface of the CD and do not write on the recorded surface using pens or pencils;
- ☐ never use CDs that are very scratched, cracked, deformed, etc. Their use could cause damage the player or make it malfunction.

The use of original CDs is required for the best audio quality. Correct operation is not guaranteed when CD-R/RW media are used that were not correctly burnt and/or with a maximum capacity above 650 MB.

IMPORTANT Do not use commercially available protective sheets for CDs or discs with stabilisers as they could get stuck in the internal mechanism and damage the disc.

IMPORTANT If a copy-protected CD is used, it may take a few seconds before the system starts to play it. The CD player cannot be guaranteed to play all protected discs. The presence of copy protection is often in small letters or may be difficult to read on the cover of the actual CD and it may say something like, for example, "COPY CONTROL", "COPY PROTECTED", "THIS CD CANNOT BE PLAYED ON A PC/MAC" or identified through the use of symbols, such as, for example:



IMPORTANT If a multisession disc is loaded, only the first session will be played.

MULTIMEDIA DEVICES: SUPPORTED AUDIO FILES AND FORMATS

For CD, USB and iPod sources the system can play files with the following extensions and formats:

- ☐ .MP3 (32 – 320 kbps);
- ☐ .WAV;
- ☐ .WMA (5 – 320 kbps) mono and stereo;
- ☐ .AAC (8 – 96 kHz) mono and stereo;
- ☐ .M4A (8 – 96 kHz) mono and stereo;
- ☐ .M4B (8 – 96 kHz) mono and stereo;
- ☐ .MP4 (8 – 96 kHz) mono and stereo.

For all sources (CD, AUX, iPod and **Bluetooth®**), the system can also play the following Playlist formats:

- ☐ .M3U
- ☐ .WPL

NOTE It makes no difference whether the suffixes are written in capital or small letters.

NOTES ON TRADEMARKS

iPod, iTunes and iPhone are registered trademarks of Apple Inc. All other trademarks are the property of their respective owners.



Apple is not responsible for the operation of this device and of its conformity with the safety rules and standards.



The DAB/DAB+/DMB Digital Radio function has been certified according to the specifications of "ARD" white sticker, for Class A - Audio services. ARD is a trademark of the Associazione per la Radiofonia Digitale in Italia.

EXTERNAL AUDIO SOURCES

Other electronic devices (e.g. iPod, PDA, etc...) can be used on the car.

Some of them can however cause electromagnetic interference. Disconnect these devices if the system performance worsens.

NOTE The system supports only FAT32-formatted USB devices. The system does not support devices with a capacity higher than 64 GB.

ANTI-THEFT PROTECTION

The system is equipped with an anti-theft protection system based on the exchange of information with the electronic control unit (Body Computer) on the car.

This guarantees maximum safety and prevents the secret code from being entered after the power supply has been disconnected.

If the check has a positive outcome, the system will start to operate, whereas if the comparison codes are not the same or if the electronic control unit (Body Computer) is replaced, the system will ask the user to enter the secret code according to the procedure described in the paragraph below.

Entering the secret code

When the system is switched on, if the code is requested, the display will show "Please enter Anti-Theft Code" followed by the video page showing a keypad to enter the secret code.

The secret code is made up of four digits, from 1 to 9: to insert the first number of the code press the corresponding key on the display. Enter the other code digits in the same way.

After entering the fourth figure, the system begins operating.

If an incorrect code is entered, the system displays "Incorrect Code. Please Try Again" to notify the user of the need to enter the correct code.

After the 3 available attempts to enter the code, the system displays "Incorrect Code. Radio locked. Please wait 30 minutes": the waiting time is displayed. Once the text has disappeared you can start the code entering procedure again.

Car radio passport

This document certifies ownership of the system. The car radio passport shows the system model, serial number and secret code.

IMPORTANT Keep the car radio passport in a safe place so that you can give the information to the relevant authorities if the system is stolen.

In case of loss of the car radio passport, contact the Alfa Romeo Authorised Services, taking an ID document and the car ownership documents.

SAFETY SETTINGS

It is recommended to use the safety settings to make driving as safe as possible.

A few options among the safety settings are listed below:

- ☐ displaying of menu buttons which are essential while driving;
- ☐ displaying of safety warnings;
- ☐ alerting if speed limits are exceeded.

For a safer driving, use voice commands to control navigation (see "Voice commands" section).

Important information

Look at the screen only when required and when you are in safety conditions to do that. If you need to look at the screen for a long time, pull over to a safe place so as not to be distracted while driving.

Immediately stop using the system in case of failure. Otherwise the system might be damaged. Contact an Alfa Romeo Authorised Service to have the system repaired.



If the volume is too loud this can be dangerous. Adjust the volume so that you can still hear background noises (e.g. horns, ambulances, police vehicles, etc.).

NAVIGATION ACTIVATION

Press the NAV button 10-fig. 1 on the front panel to activate navigation mode.

When the navigation is started for the first time, a few configuration questions must be answered: answer them by tapping the screen.

GPS RECEPTION (Global Positioning System)

The GPS is a satellite system which provides worldwide information about time and position. The GPS is exclusively controlled by the government of the United States of America which is the only responsible for the availability and accuracy of this system. The operation of this navigation system can be influenced by any change made to the availability and precision of the GPS or by specific environmental conditions. TomTom accepts no responsibility for the availability and accuracy of the GPS.

When TomTom navigation is started for the first time, the system may require some minutes to determine the GPS position and display the current position on the map. Afterwards the position will be found much more quickly (usually a few seconds are needed).

The presence of big buildings (or similar obstacles) may sometimes interfere with the GPS signal reception.

SOFTWARE UPDATES

When the update software for the Uconnect™ 5" Radio Nav system will be available, it will be possible to download it from website www.alfaromeo.it (for Italy) or www.alfaromeo.com (for other countries), or contacting the Alfa Romeo Authorised Services.

MAP UPDATE

To update the map, see the "Map update" chapter herein.

ASSISTANCE FOR USING THE NAVIGATION SYSTEM

To display further information, go to the www.tomtom.com/support website.

IMPORTANT INFORMATION ON COPYRIGHTS

© 2013 TomTom. All rights reserved. TomTom and the logo with "two hands" are registered trademarks owned by TomTom N.V. or any of its branches

© 2013 TomTom. All rights reserved. This material is proprietary and protected by copyright and/or by database rights and/or other rights on intellectual property of TomTom or of its suppliers. The use of this material is subject to the terms of a license contract. Any unauthorised copy or disclosure of this material constitutes a legally prosecutable violation.

Includes data of Ordnance Survey © Crown - Database right and copyright 2013 Includes data of Royal Mail © Royal Mail - Database right and copyright 2013 Data Source © 2013 TomTom All rights reserved.

The software included in this product is protected by copyright and its use is authorised according to a GPL. A copy of the license is available in the License section. After the product has been sent, the relevant source code can be requested within three years. For further information go to the tomtom.com/gpl website or contact the nearest TomTom customer service from the tomtom.com/support website. A CD with the corresponding source code will be sent upon request.

Linotype, Frutiger and Univers are trademarks of Linotype GmbH registered at U.S. Patent and Trademark Office and can be registered in certain jurisdictions. MHei is a trademark of The Monotype Corporation and can be registered in certain jurisdictions.

TECHNICAL SPECIFICATIONS

Maximum power: 4x40 W

AUDIO SYSTEM

Front speakers

- 2 Ø 38 mm tweeters;
- 2 Ø 165 mm mid-woofer speakers.

Rear speakers

- 2 Ø 38 mm tweeters;
- 2 Ø 165 mm mid-woofer speakers.

High level radio (dual tuner and dual aerial).

BOSE HI-FI AUDIO SYSTEM

(for versions/markets, where provided)

Front speakers

- 2 Ø 38 mm tweeters;
- 2 Ø 165 mm mid-woofer speakers.

Rear speakers

- 2 Ø 38 mm tweeters;
- 2 Ø 165 mm mid-woofer speakers;
- 1 8-channel amplifier;
- 1 bass box.

High level radio (dual tuner and dual aerial).

The Bose HI-FI audio system has been carefully designed to provide the best acoustic performance and reproduce sound like a live concert in all areas of the passenger compartment.

The system faithfully reproduces crystalline high tones and provides full and rich bass tones that make the loudness function superfluous.

The complete range of sound is reproduced throughout the entire passenger compartment so that the occupants are enveloped with the feeling of space experienced when listening to live music.

The components used have been patented and make use of the most sophisticated technology whilst at the same time being easy to use by even the most inexperienced people.

QUICK REFERENCE GUIDE






CONTROLS ON FRONT PANEL



fig. 1

A0J0395

FRONT PANEL CONTROL SUMMARY TABLE

Button	Functions	Mode
1 - 	Turn on	Short button press
	Turn off	Short button press
	Adjust volume	Left/right rotation of knob
2 - 	Volume on/off (Mute/Pause)	Short button press
3 - 	Eject CD	Short button press
4	CD housing	-
5 - 	Display on/off	Short button press
6 - 	Exit from selection/return to previous screen	Short button press
7 - BROWSE ENTER	Scroll list or tune to a radio station	Left/right rotation of knob
	Confirm displayed option	Short button press
8 - MORE	Access to additional functions: Time displaying, Trip Computer, External temperature, Settings	Short button press
9 - PHONE	Phone data displaying	Short button press
10 - NAV	Access to Navigation menu	Short button press
11 - MEDIA	Select source: CD, USB/iPod, AUX or Bluetooth ®	Short button press
12 - RADIO	Access to Radio mode	Short button press

STEERING WHEEL CONTROLS

(for versions/markets, where provided)

DESCRIPTION

The controls for the main system functions are present on the steering wheel to make things easier.

The activation of the function selected is controlled, in some cases, by how long the button is pressed (short or long press) as described in the table below.

 



 




fig. 2


A0J0408

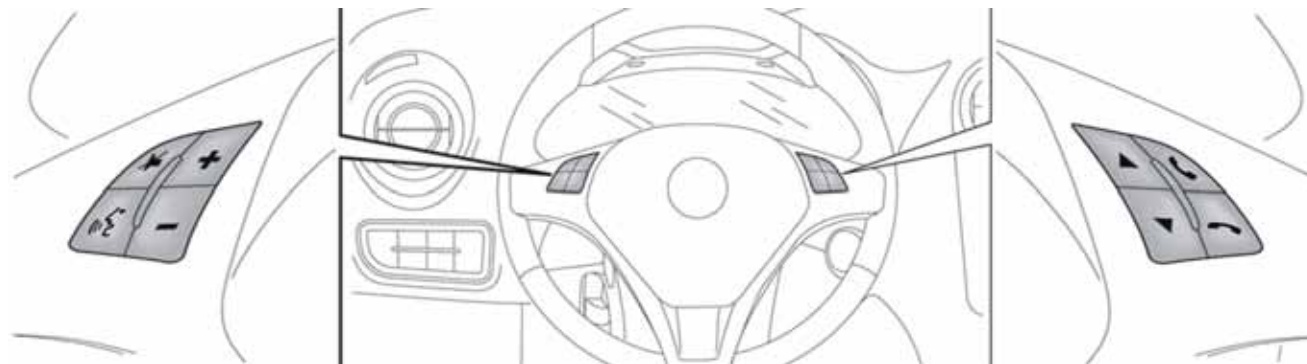STEERING WHEEL CONTROL SUMMARY TABLE

Button	Interaction
	<ul style="list-style-type: none"> - Acceptance of incoming call - Acceptance of the second incoming phone call and putting the active phone call on hold - Activation of voice recognition for Phone function - Interruption of the voice message in order to give a new voice command - Interruption of voice recognition
	<ul style="list-style-type: none"> - Rejection of incoming call - Ending of call in progress
	<ul style="list-style-type: none"> - Deactivate/reactivate the microphone during a phone conversation - Activation/deactivation of the CD, USB/iPod, Bluetooth® source Pause - Activation/deactivation of radio Mute function
	<ul style="list-style-type: none"> - Adjustment of the audio volume: hands-free, SMS message reader, voice announcements and music sources
	<ul style="list-style-type: none"> - Activation of voice recognition - Interruption of the voice message in order to give a new voice command - Interruption of voice recognition
	<ul style="list-style-type: none"> - Short press (Radio mode): select next/previous station - Long press (Radio mode): scan higher/lower frequencies until released - Short press (CD, USB/iPod, Bluetooth® mode): selection of previous/next track - Long press (CD, USB/iPod, Bluetooth® mode): fast forward/rewind until released

SWITCHING THE SYSTEM ON/OFF

RADIO (TUNER) MODE

The system switches on/off when the  (ON/OFF) button/knob is pressed (1-fig. 1).

The electronic volume adjustment control rotates continuously (360°) in both directions, without stop positions.

Turn the button/knob clockwise to increase the radio volume or anticlockwise to decrease it.

The system has the following tuners: AM, FM and DAB (for versions/markets, where provided).

RADIO MODE SELECTION

Press the RADIO button (12-fig. 1) on the front panel to activate the radio mode.

The different tuning modes can be selected with the corresponding button on the display (see fig. 3).

Each tuning mode can have a specific set of presets.

SELECTING A FREQUENCY BAND

Briefly press the "AM/FM" button to switch from AM to FM and vice versa.

If the DAB tuner is available, briefly press the "AM/FM", "AM/DAB", "FM/DAB" buttons to select the desired band.

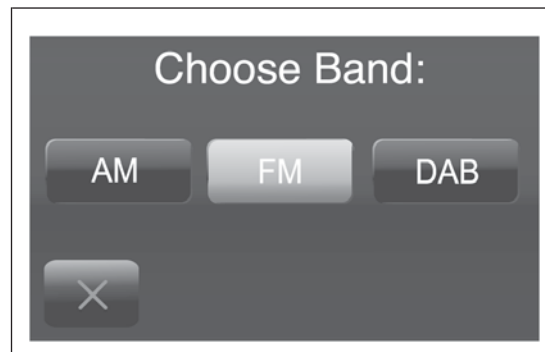 


fig. 3

F0Y1001

DISPLAYED INFORMATION

After the desired radio station is selected on the display (see fig. 4), the following information is shown:

At the top: the list of radio stations stored (preset) is displayed; the station being listened to is highlighted.

In the middle: the name of the radio station being listened to and the buttons to select the previous or the next radio station are displayed.

At the bottom: the following buttons are displayed:

- ☐ "Browse": list of the radio stations available;
- ☐ "AM/FM", "AM/DAB", "FM/DAB": selection of the desired frequency band (button reconfigurable according to the band selected: AM, FM or DAB);
- ☐ "Tune" : manual radio station tuning (not available for DAB radios);
- ☐ "Info": additional information on the source being listened to;
- ☐ "Audio": access to the "Audio setting" screen.



fig. 4

F0Y1000

RADIO STATION SELECTION

To search for the desired radio station press buttons **◀◀** or **▶▶** on the display or use the steering wheel controls.

PREVIOUS/NEXT RADIO STATION SEARCH

Briefly press buttons **◀◀** or **▶▶** on the display: when the button is released the previous or the next radio station is displayed.

When searching forwards, if the system reaches the end of the band, it will automatically stop on the station where the search has started from.

PREVIOUS/NEXT RADIO STATION FAST SEARCH

Hold down buttons **◀◀** or **▶▶** on the display to start the fast search: when the button is released, the first tunable radio station can be heard.

AM/FM RADIO STATION TUNING

Use the "Tune" button to directly select a radio station.

Press the "Tune" button on the display then select the first number of the desired radio station (see fig. 5).

The graphic keyboard on the display is used to enter the single number next to the station.

In this mode, use buttons **+** and **-** to fine-tune the frequency.

Press button **<X>** (Delete) to delete a wrong number (and enter the correct station number).

After entering the last digit of the station, the "Tune" screen is deactivated and the system tunes automatically to the station selected (the number of the radio station is displayed in the "Tune" text box).

The screen disappears automatically after 5 seconds or manually by pressing the "OK" or **<X>** (Delete) buttons.



fig. 5

F0Y1007

Incomplete radio station selection ("OK")

Press the "OK" button on the display to tune to the radio station selected and close the "Direct Tune" screen (manual tuning).

Exit the "Direct Tune" screen

Press the "Exit" or "Radio" button on the display to return to the main system screen.

DAB RADIO

(for versions/markets, where provided)

Once the DAB radio mode on the display is selected, the information on the station being listened to is displayed (see fig. 6) and the following modes will be available:

Selection of the previous/next radio station by:

- ☐ rotating the BROWSE ENTER button/knob (7-fig. 1);
- ☐ briefly pressing the **◀◀** or **▶▶** button on the display;
- ☐ pressing the **◀◀** or **▶▶** controls on the steering wheel.

Hold down the **◀◀** or **▶▶** buttons to fast scroll the station list.



fig. 6

F0Y1020

The "Browse" button is used to display:

- ☐ the list of all DAB stations;
- ☐ the list of stations filtered by "Genres";
- ☐ the list of stations filtered by "Ensembles" (broadcast group).

Within each list, the "ABC" button allows the user to skip to the desired letter in the list.

The "Refresh" button requests an update of the DAB radio station list: the update may last from a few seconds to about two minutes.

SETTING THE PRESELECTIONS

Presets are available in all system modes and are activated by touching one of the preset buttons located in the upper area of the display.

If you are tuned to a radio station that you wish to store, hold down the button on the display which corresponds to the desired preset until an acoustic confirmation signal is emitted.

The system can store up to 12 radio stations in each mode: the first 3 stored radio stations are displayed in the upper area.

Press the "All" button on the display to show all the radio stations stored in the frequency band selected.

AUDIO

To enter the "Audio" menu, press the MORE button (8-fig. 1) on the front panel and then select "Settings" and "Audio", or press the MEDIA button (11-fig. 1) on the front panel and then select "Audio".

The following adjustments can be carried out using the "Audio" menu:

- "Equalizer" (for versions/markets, where provided);
- "Balance/Fade" (left/right and front/rear balance adjustment);
- "Volume/Speed" (excluding versions with Hi-Fi system) speed-dependent automatic volume adjustment;
- "Loudness" (for versions/markets, where provided);
- "Auto-On Radio";
- "Radio Off Delay".

To exit the "Audio" menu, press the ◀ /Done button.

NOTE When a setting is changed, the ◀ button is replaced with the word "Done".

Equaliser

(for versions/markets, where provided)

Select "Equaliser" on the display to adjust the bass, medium and treble tones.

Use the "+" or "-" buttons to carry out the settings desired (see fig. 7).

Once the adjustments are complete press the ◀ /Done button to return to the "Audio" menu.

Balance/Fader

Press the "Balance/Fader" button to balance the sound from the front and rear seat speakers.

Press the ▲ or ▼ buttons to balance the front and rear speakers (see fig. 8).

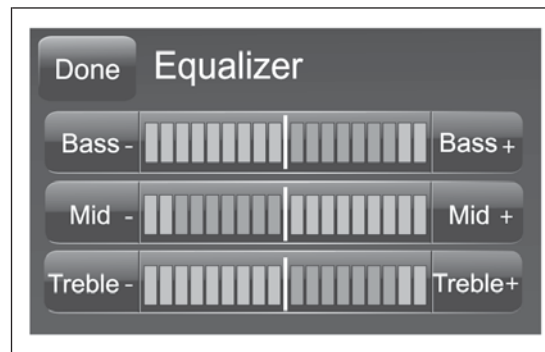 


fig. 7

F0Y1002

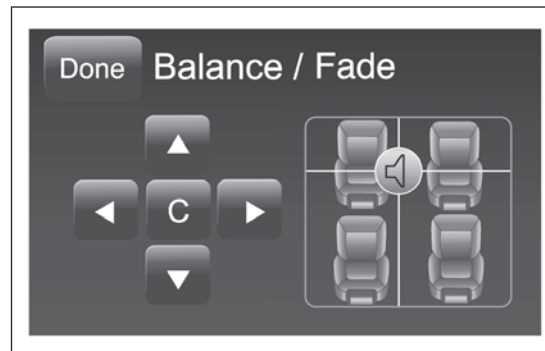 



fig. 8

F0Y1003

Press the ◀ or ▶ buttons to balance the speakers on the left and the right side.

The adjustment is also possible by moving the  symbol on the right side of the display upwards/downwards/to the left/to the right.

Press the central "C" button to balance the adjustments.

Once the adjustments are complete press the ◀ /Done button to return to the "Audio" menu.

Volume/Speed

Press the "Volume/Speed" button to choose between "Off" and "1, 2 or 3".

The option selected is displayed (see fig. 9).

Choose "1, 2 or 3" to increase the volume proportionally to the selection made.

Once the adjustments are complete press the ◀ /Done button to return to the "Audio" menu.

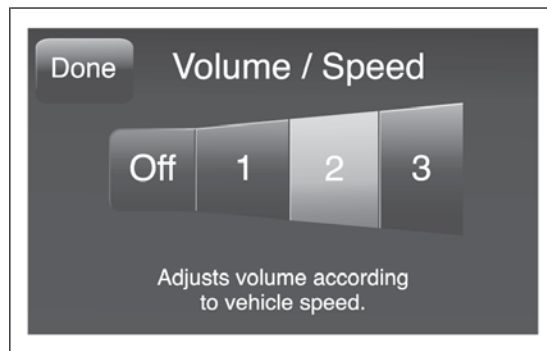 


fig. 9

F0Y1004

Loudness

(for versions/markets, where provided)

To activate/deactivate the "Loudness" function to improve the sound quality at low volumes.

Auto-On Radio

To set the radio behaviour when the ignition key is turned to MAR-ON.

The options are radio on, radio off or reset of the condition active when the ignition key was last turned to STOP.

Radio Off Delay

To keep the radio on for a preset time after the ignition key is turned to STOP.

MEDIA MODE

This section describes the interaction modes concerning the operation of CD, **Bluetooth**®, AUX, USB/iPod fig. 10.

TRACK CHANGE (previous/next)

Briefly press the ►► button or turn the BROWSE ENTER button/knob (7-fig. 1) clockwise to play the next track or briefly press the ◄◄ button or turn the BROWSE ENTER button/knob counterclockwise to return to the beginning of the selected track or at the beginning of the previous track if this has been played for less than 8 seconds.

TRACK FAST FORWARD/REWIND

Press and hold down the ►► button to fast forward the selected track or keep the ◄◄ button pressed to fast rewind the track.

The fast forward/rewind will stop once the button is released or when the previous/next track is reached.

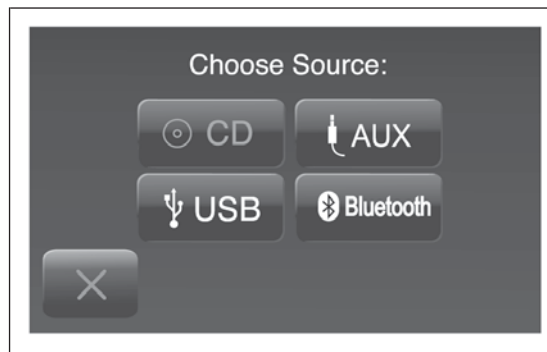 


fig. 10

F0Y1008

TRACK SELECTION (Browse)

Use this function to scroll through or select the tracks on the active device.

The selection options depend on the device connected or the CD type inserted.

For example, on an audio CD you can select the track to be played, whilst on a CD-ROM, a USB/iPod or **Bluetooth**® device you can scroll through the list of artists, genres and albums available depending on the information present on the tracks.

NOTE A few **Bluetooth**® devices do not offer the possibility of scrolling tracks through all categories.

Use the "ABC" button inside each list to skip to the desired letter within the list.

NOTE This button may be disabled for some **Apple**® devices.

NOTE The "Browse" button does not allow any operation on an AUX device.

NOTE Not all **Bluetooth**® devices enable to scroll the information on the tracks. To consult the list of audio **Bluetooth**® devices and supported functions, visit the www.alfaromeo.it website (for Italy) or the www.alfaromeo.com website (for other countries) or call Customer Service on 00800.2532.0000 (the number may vary depending on the country: please refer to the reference table in the "Customer Service number list" paragraph herein).

Press the "Browse" button to activate this function on the source being played.

Turn the BROWSE ENTER (7-fig. 1) button/knob to select the desired category and then press the button/knob to confirm the selection.

Press the "X" button to cancel the function.

NOTE The indexing time of a USB device can vary according to the media inserted (in some cases it can take a few minutes).

AUDIO SOURCE SELECTION

Press the "Source" button to select the desired audio source among those available: CD, AUX, USB/iPod or **Bluetooth®**.

If no source is selected, the screen disappears after a few seconds and the display shows the main screen again.

TRACK INFORMATION DISPLAY

Press the "Info" button to show on the display the information on the track being listened to for devices that support the function.

Press the "X" button to exit the screen.

RANDOM TRACK REPRODUCTION

Press the ">" button then the "Shuffle" button to play the tracks on CD, USB/iPod or **Bluetooth®** in random mode.

Press the "Shuffle" button again to deactivate the function.

TRACK REPETITION

Press the ">" button then the "Repeat" button to activate the function.

Press the "Repeat" button again to deactivate the function.

CD PLAYER

To activate the CD mode, enter an audio CD or an MP3 in the relevant slot 4 (fig. 1) or press the MEDIA button (11 - fig. 1) on the front panel.

If there is a CD inside, press the graphic button "Source" then select "CD".

If the CD loaded cannot be read (e.g. a CD-ROM has been inserted or the CD is inserted the wrong way round or there is a reading error) the display will show an error message.

LOADING/EJECTING A CD

To load the CD, insert it gently into the slot to activate the motorised loading system, which will position it correctly (the "CD" symbol on the display comes on).

Enter a CD when the system is on, the CD mode is automatically selected and the system starts playing the tracks.

The display shows the number of the track and the time (minutes and seconds).

Press the ▲ button (EJECT) (3 - fig. 1) on the front panel, with the system on, to activate the motorised ejection of the CD.

After the ejection, the audio source will be automatically selected.

If the CD is not removed from the slot, the system will re-enter it automatically after about 10 seconds without playing it.

SOURCE Bluetooth®

This mode is activated by pairing a **Bluetooth**® device containing music tracks with the system.

PAIRING A Bluetooth® AUDIO DEVICE

To pair a **Bluetooth**® audio device, proceed as follows:

- ❑ activate the **Bluetooth**® function on the device;
- ❑ press the MEDIA button (11-fig. 1) on the front panel;
- ❑ if the "Media" source is active, press the "Source" button;
- ❑ select the **Bluetooth**® media source;
- ❑ press the "Add Device" button;
- ❑ search for **uconnect**™ on the **Bluetooth**® audio device (during the pairing stage a screen is displayed showing the progress of the operation);
- ❑ when requested by the audio device, enter the PIN code shown on the system display or confirm on the device the PIN displayed;

❑ if the pairing procedure is completed successfully, a screen is displayed. Answer "Yes" to the question to pair the **Bluetooth**® audio device as favourite (the device will have priority over all other devices that will be paired subsequently). If "No" is selected, the priority is determined according to the order of connection. The last device connected will have the highest priority;

❑ an audio device can also be paired by pressing the MORE button (8-fig. 1) on the front panel and then selecting "Settings" and "Bluetooth", or pressing the MEDIA button (11-fig. 1) on the front panel and then selecting "Support" and "Bluetooth".

IMPORTANT If the **Bluetooth**® connection between mobile phone and system is lost, consult the mobile phone owner's handbook.

USB/iPod SUPPORT

To activate USB/iPod mode insert a dedicated device (USB or iPod) in the USB socket fig. 11 (versions without front armrest) or fig. 12 (versions with front armrest) on the car.

If a USB/iPod device is inserted with the system on, this starts playing the tracks present on the device.

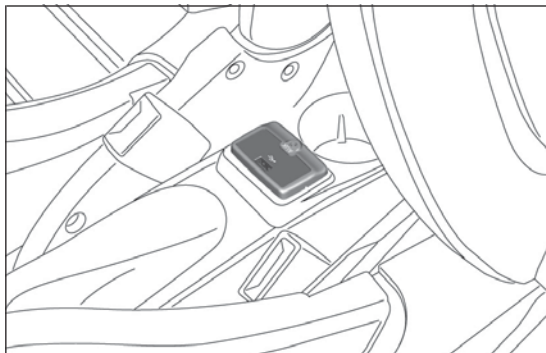 


fig. 11

A0J0406

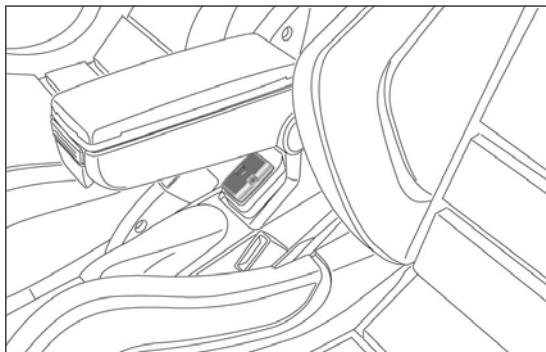 


fig. 12

A0J0407



Do not use USB devices with a size that is not compatible with the available space when the armrest is completely lowered fig. 12. Otherwise they may be damaged.

AUX SUPPORT

To activate the AUX mode fit a suitable device in the AUX port on the car.

Inserting a device with AUX outlet socket the system starts playing the AUX source connected, if it is already being played.

Adjust the volume by the button/knob  (1 - fig. 1) on the front or by the volume adjustment control on the connected device.

As for the "Audio source selection" function, see the chapter "Media Mode".

IMPORTANT

The functions of the device connected with the AUX socket are directly managed by the device itself: it is not possible to change track/folder/playlist or control playing start/end/pause with the controls on the front panel or on the steering wheel.

Do not leave the cable of your portable player connected with the AUX socket after disconnection, to avoid possible hiss from the speakers.

PHONE MODE

PHONE MODE ACTIVATION

Press the PHONE button (9-fig. 1) on the front panel to activate Phone mode.

The following screen appears on the display (see fig. 13).

MAIN FUNCTIONS

The buttons on the display can be used to:

- ☐ compose the phone number (using the graphic keypad on the display);
- ☐ display and call the contacts on the mobile phone phonebook;
- ☐ display and call contacts from the registers of previous calls;
- ☐ pair up to 10 phones/audio devices to make access and connection easier and quicker;
- ☐ transfer calls from the system to the mobile phone and vice versa and deactivate the microphone audio for private conversations.

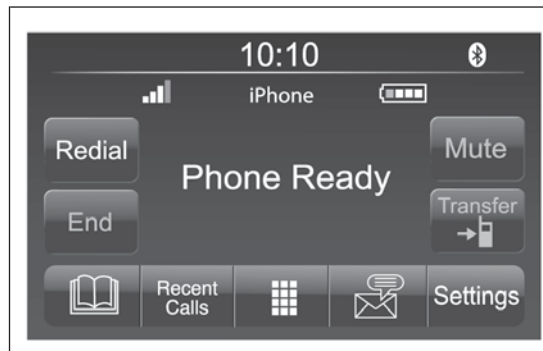 


fig. 13

F0Y1012

The mobile phone audio is transmitted through the car's audio system; the system automatically mutes the radio when the Phone function is used.

DISPLAYED INFORMATION

When a phone is connected to the system, the display shows various information (if available):

- ☐ status of roaming;
- ☐ network signal intensity;
- ☐ mobile phone battery charge;
- ☐ mobile phone name.

To consult the list of mobile phones and supported functions, visit the www.alfaromeo.it website (for Italy) or the www.alfaromeo.com website (for other countries) or call Customer Service on 00800.2532.0000 (the number may vary depending on the country: please refer to the reference table in the "Customer Service number list" section herein).

PAIRING A MOBILE PHONE

IMPORTANT Carry out this operation only with car stationary and in safety conditions; this function is deactivated when the car is moving.

The pairing procedure for a mobile phone is described below: always consult the handbook for the mobile phone in any case.

To pair the mobile phone, proceed as follows:

- ☐ activate the **Bluetooth**® function on the mobile phone;
- ☐ press the PHONE button (9-fig. 1) on the front panel;
- ☐ if no phone is paired with the system yet, the display shows a dedicated screen;
- ☐ select "Yes" to start the pairing procedure then search for the **uconnect**™ device on the mobile phone (if "No" is selected, the Phone main screen is displayed);
- ☐ when prompted by the mobile phone, use its keyboard to enter the PIN code shown on the system display or confirm on the mobile phone the PIN displayed;
- ☐ from the "Phone" screen you can always pair a mobile phone pressing the "Settings" button: press the "Add Device" button and proceed as described above;
- ☐ during the pairing stage a screen is displayed showing the progress of the operation;
- ☐ when the pairing procedure is completed successfully, a screen is displayed: answer "Yes" to the question to pair the mobile phone as favourite (the mobile phone will have priority over all other mobile phones that will be paired subsequently). If no other devices are paired, the system will consider the first associated device as favourite.

Note The priority is determined according to the order of connection for mobile phones which are not set as favourite. The last phone connected will have the highest priority.

Note On some mobile phones, to make the SMS voice reading function available, the SMS notification option on phone must be enabled; this option is usually available on the phone, in the **Bluetooth®** connections menu for a device registered as **Uconnect™**. After enabling this function on the mobile phone, it must be disconnected and reconnected with the **Uconnect™** system in order to make it effective.

STORING NAMES/NUMBERS IN THE MOBILE PHONE PHONEBOOK

Before pairing your mobile phone, you must make sure you have stored the names you want to contact in the phonebook on your mobile phone so that you can call them using the car's hands-free system.

If your phonebook does not contain any names, enter new names for the most frequently used numbers.

For further details, consult your mobile phone owner's handbook.

IMPORTANT The names in the phonebook not containing phone numbers or name and surname will not be displayed.

CONNECTION/DISCONNECTION OF A MOBILE PHONE OR A Bluetooth® AUDIO DEVICE

Connection

The system connects automatically to the mobile phone paired with the highest priority.

To choose a specific mobile phone or **Bluetooth®** audio device, proceed as follows:

- ☐ press the MORE button (8-fig. 1) on the front panel and then select "Settings" and "Bluetooth", or press the MEDIA button (11-fig. 1) on the front panel and then select "Source" and "Bluetooth".
- ☐ select "Phone/Bluetooth" on the display;
- ☐ select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- ☐ select the specific device (mobile phone or **Bluetooth®** device);
- ☐ press the "Connect" button;
- ☐ during the connection stage a screen is displayed showing the progress of the operation;
- ☐ the device connected is highlighted in the list.

Disconnection

To disconnect a specific mobile phone or **Bluetooth®** audio device, proceed as follows:

- ☐ press the MORE button (8-fig. 1) on the front panel and then select "Settings" and "Bluetooth", or press the MEDIA button (11-fig. 1) on the front panel and then select "Source" and "Bluetooth".
- ☐ select "Phone/Bluetooth" on the display;
- ☐ select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- ☐ select the specific device (mobile phone or **Bluetooth®** device);
- ☐ press the "Disconnect" button.

DELETION OF A MOBILE PHONE OR A Bluetooth® AUDIO DEVICE

To delete a mobile phone or **Bluetooth®** audio device from a list, proceed as follows:

- ☐ press the MORE button (8-fig. 1) on the front panel and then select "Settings" and "Bluetooth", or press the MEDIA button (11-fig. 1) on the front panel and then select "Source" and "Bluetooth".
- ☐ select "Phone/Bluetooth" on the display;
- ☐ select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- ☐ select the device (mobile phone or **Bluetooth®** device);
- ☐ press the "Delete Device" button;
- ☐ a confirmation screen will appear on the display: press "Yes" to delete the device or "No" to cancel the operation.

SETTING A MOBILE PHONE OR A Bluetooth® AUDIO DEVICE AS FAVOURITE

To set a mobile phone or **Bluetooth®** audio device as favourite, proceed as follows:

- ☐ press the MORE button (8-fig. 1) on the front panel and then select "Settings" and "Bluetooth", or press the MEDIA button (11-fig. 1) on the front panel and then select "Source" and "Bluetooth".
- ☐ select "Phone/Bluetooth" on the display;
- ☐ select the "Paired Phones" or "Paired Audio" list using the corresponding button on the display;
- ☐ select the specific device (mobile phone or **Bluetooth®** device);
- ☐ press the "Make Favourite" button;
- ☐ the device selected is moved to the top of the list.

TRANSMISSION OF PHONE DATA (PHONEBOOK AND RECENT CALLS)

If your mobile phone has a function for sending the phonebook via **Bluetooth®** technology.

During the pairing procedure a screen will appear with the request "Do you want to download you phone data and recent calls?".

Answer "Yes" to copy the whole phonebook and the list of recent calls to the system.

Answer "No" to carry out the operation later on.

After the first phone data transmission, the procedure for transmitting and updating the phonebook (if supported) starts as soon as a **Bluetooth®** connection is established between mobile phone and system.

Whenever a mobile phone is connected to the system, a maximum of 1000 contacts can be downloaded and updated for each phone.

Depending on the amount of items downloaded from the phonebook, a slight delay can occur before the last names downloaded can be used. Up to then the phonebook downloaded previously (if present) will be available.

Only the phonebook of the mobile phone currently connected to the system can be accessed.

The phonebook downloaded from the mobile phone can neither be modified nor be deleted through the system: changes will be transmitted and updated in the system when the mobile phone is next connected.

DELETION OF PHONE DATA (PHONEBOOK AND RECENT CALLS)



Select "Delete Phone Data" on the display to delete the list of recent calls and the phonebook copy.

MAKING A PHONE CALL

The operations described below can only be accessed if supported by the mobile phone in use.

For all functions available, refer to the mobile phone owner's handbook.


A call can be made by:

- ☐ selecting the  icon (mobile phone phonebook);
- ☐ selecting "Recent Calls";
- ☐ selecting the  icon;
- ☐ pressing the "Redial" button.

Dialling the phone number using the "keyboard" icon on the display

Enter the phone number using the graphic keyboard displayed.

Proceed as follows:

- ☐ press the PHONE button (9-fig. 1) on the front panel;
- ☐ press the  button on the display and use the numbered buttons to enter the number;
- ☐ press the "Call" button to make a call.

Dialling the phone number using the mobile phone

It is possible to dial a phone number with the mobile phone and continue using the system (never allow yourself to be distracted while driving).

When a phone number is dialled with the keyboard of the mobile phone, the audio of the call is played over your car's sound system.

Recent calls

The list of the last calls made for each of the following call types can be displayed:

- ☐ Calls received;
- ☐ Calls made;
- ☐ Calls without a reply;
- ☐ All calls.

To access these types of call, press the "Recent Calls" button on the Phone menu main screen.

MANAGING AN INCOMING CALL


Call controls

The buttons on the display allow the following phone call functions to be managed:

- ☐ Answer;
- ☐ End;
- ☐ Ignore;
- ☐ Put on hold/resume;
- ☐ Deactivate/activate the microphone;
- ☐ Transfer the call;
- ☐ Switch from one call to the other;
- ☐ Conference/merge two active calls.

Answering a call

When a phone call is received on the mobile phone, the system deactivates the audio system (if active) and displays a screen.

Press the "Answer" button or the  button on the steering wheel controls to answer.

Rejecting a call

Press the "Ignore" button or the  button on the steering wheel controls to reject.

Answering an incoming call during a conversation

To answer an incoming call whilst another phone conversation is in progress, press the "Answer" button to put the ongoing call on hold and answer the new incoming call.

IMPORTANT Not all mobile phones may support the management of an incoming call when another phone conversation is active.

MAKING A SECOND PHONE CALL

When a phone conversation is active, a second phone call can be made as follows:

- ☐ select the number/contact from the list of recent calls;
- ☐ select the contact from the phonebook;
- ☐ press the "Hold" button and dial the number using the graphic keyboard of the display.

MANAGING TWO PHONE CALLS

If two calls are in progress (one active and one on hold), it is possible to switch between them pressing the "Call On Hold" button or to merge the two calls in a conference pressing the "Merge calls" button.

Note Check whether the telephone in use supports the management of a second call and the "Conference" mode.

ENDING A CALL

Press the "End" button or the  button on the steering wheel controls to end a call in progress.

Only the ongoing call is ended and any call on hold becomes the new active call.

Depending on the type of mobile phone, if the ongoing call is ended by the caller, the call on hold may not be activated automatically.

REDIALLING

To call the number/contact of last call made, press the "Redial" button.


CONTINUING A PHONE CALL

After the engine is switched off, it is still possible to continue a phone call.

The call continues until it is ended manually or for a maximum period of about 20 minutes.

When the system is switched off the call is transferred to the mobile phone.

ACTIVATION/DEACTIVATION OF THE MICROPHONE

During a call the microphone can be deactivated pressing the  button on the front panel (or on the steering wheel controls) or the "Mute" button on the display.

When the microphone is deactivated it is still possible to listen to the call in progress.

To reactivate the microphone, press the corresponding button again.

TRANSFERRING A CALL


The ongoing calls can be transferred from the mobile phone to the system and vice versa without ending the calls.

To transfer the call, press the "Transfer" button.


SMS MESSAGE READER

The system can read the messages received by the mobile phone.

To use this function the mobile phone must support the SMS exchange function via **Bluetooth**®.

If this function is not supported by the phone, the corresponding  button is deactivated (greyed out).

When a text message is received, the display will show a screen where the options "Listen", "Call" or "Ignore" can be selected.

Press the  button to access the list of SMS messages received by the mobile phone (the list displays a maximum of 60 messages received).

SMS message reader activation/deactivation

The SMS message automatic reading function can be activated/deactivated by pressing the corresponding button on the display, which is shown after pressing the phone selection button.

Note On some mobile phones, to make the SMS voice reading function available, the SMS notification option on phone must be enabled; this option is usually available on the phone, in the **Bluetooth**® connections menu for a device registered as **Uconnect**™. After enabling this function on the mobile phone, it must be disconnected and reconnected with the **Uconnect**™ system in order to make it effective.

SMS MESSAGE OPTIONS

Default SMS messages are stored in the system and can be sent to answer a received message or as a new message.

When receiving an SMS, the systems also allows the same message to be forwarded.

"MORE" MODE

Press the MORE button (8 - Fig. 1) on the front panel to display (see fig. 14) the following operation settings:

- ☐ Clock
- ☐ Compass
- ☐ External temperature
- ☐ Trip Computer
- ☐ Settings

CLOCK

Press the "Clock" button (see fig. 14) to display the clock.

COMPASS

Press the "Compass" button (see fig. 14) to display the direction you are driving to.

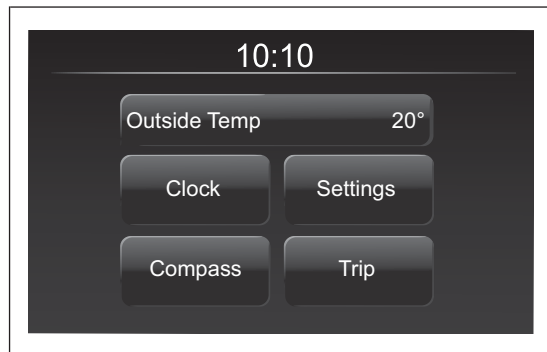 


fig. 14

A0J1550

EXTERNAL TEMPERATURE

Inside the "External Temp" box (see fig. 14) the external temperature is displayed.

TRIP COMPUTER

Press the "Trip" button (see fig. 14) to display the trip information of the car.

This function allows you to display the consumption levels and define two separate trips called "Trip A" and "Trip B" for monitoring the car's "complete journey" in a reciprocally independent manner.

Both functions can be reset (reset - start of a new journey): to reset the desired "Trip" hold down the "Trip A" or "Trip B" buttons.

SETTINGS

Press the "Settings" fig. 14 button to display the "Settings" menu (see fig. 15).

NOTE The menu items displayed vary according to the versions.

The menu comprises the following options:

- ☐ Display;
- ☐ Clock & Date;
- ☐ Safety/Assistance (for versions/markets, where provided);
- ☐ Lights (for versions/markets where provided);
- ☐ Doors&Locks;
- ☐ Audio;
- ☐ Phone/Bluetooth;
- ☐ Radio;
- ☐ Restore Default Settings.

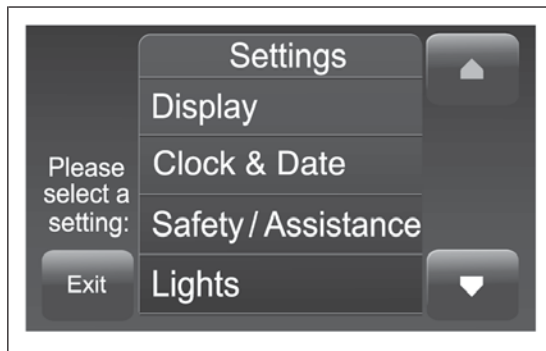 


fig. 15

F0Y1005

Display

The "Display" menu displays the following options:

- ☐ **"Brightness"** (this setting is not available when the display mode is set to "Automatic"): select "Brightness" and press the "+" or "-" buttons to adjust the display brightness with the headlights on or off (the setting not corresponding to the active headlight condition is greyed out).
- ☐ **"Display Mode"**: press the "Display Mode" button to set the display brightness according to "Day", "Night" or "Auto" condition. In "Auto" mode the display brightness is aligned to that of the instrument panel.
- ☐ **"Language"**: press the "Language" button to select one of the languages available.
- ☐ **"Units"**: press the "Units" button to select the correct unit for "Temperature" ("°C" or "°F"), "Distance" ("km" or "mi") and "Fuel Consumption". If the distance is in "km", "km/l" or "l/100 km" can be selected. If the distance is in "mi" (miles), "miles per gallon" ("mpg") are set automatically.
- ☐ **"Voice Resp. Length"**: press the relevant button to set the detail level of the voice messages supplied by the system and the suggestions displayed.
- ☐ **"Touchscreen Beep"**: press the relevant button to activate/deactivate the acoustic signal when the buttons on the display are pressed.
- ☐ **"Display Trip B"**: press the relevant button to activate/deactivate the displaying of the Trip B on the instrument panel.

Clock & Date

Use this function to set the clock.

Time setting

Press the "Settings" button and then "Clock & Date".

Select "Set Time" and press the ▲ or ▼ buttons (see fig. 16) to adjust hours and minutes.

Press the "12h" or "24h" buttons to select the time format.

The "am" and "pm" buttons are available in "12h" mode.

In the Clock menu it is possible to select "Show Time Status" which allows clock status display to be activated/deactivated on the upper area of the display (for versions/markets, where provided).

Date setting

To set the date proceed as for the time setting: select "Set Date" to adjust day, month and year.

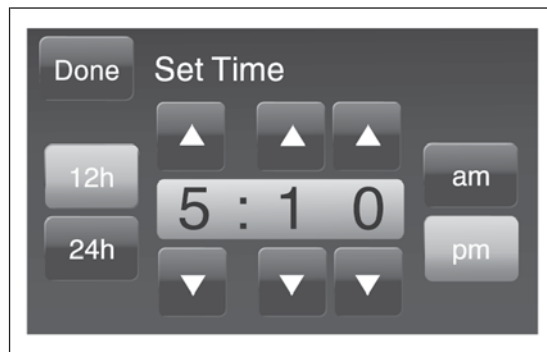 


fig. 16

F0Y1006

Safety/Assistance

(for versions/markets, where provided)

Sensitivity of the rain sensor can be adjusted with this function (for versions/markets, where provided).

Lights

(for versions/markets, where provided)

This function can be used to carry out the following adjustments:

- ☐ "Twilight sensor" (for versions/markets, where provided):
adjustment of headlight activation sensitivity;
- ☐ "Daytime Lights" (DRL) (for versions/markets where provided):
activation/deactivation of daytime running lights;
- ☐ "Cornering Lights" (for versions/markets where provided):
activation/deactivation of cornering lights.

Doors&Locks

Use this function to activate/deactivate the automatic door locking when the car is moving ("Autoclose" function).

Audio

See paragraph "Audio" in section "Switching the system on/off".

Phone/Bluetooth

See the description in the "Connecting/disconnecting a mobile phone or a **Bluetooth**® audio device" paragraph in the "Phone Mode" section.

Radio

This function can be used to configure the following options:

- ☐ "Traffic Announc.": activation/deactivation of automatic tuning to traffic announcements ("TA" function);
- ☐ "Altern. Frequency": activation/deactivation of the automatic tuning to the strongest signal for the station selected ("AF" function);
- ☐ "Regional": activation/deactivation of automatic tuning to a station which broadcasts regional news ("REG" function);
- ☐ "Playing DAB Announcements" (for versions/markets, where provided): activation/deactivation of automatic tuning to DAB announcements and selection of announcement categories of interest from those available.

Restore Default Settings

Use this function to restore the settings for display, time, date, audio and radio to the default values set by the manufacturer.

PLANNING A ROUTE

SAFETY/LEGAL NOTICE

When the Uconnect™ 5" Radio Nav is used for the first time, after resetting the default settings and having changed the language, the system will ask you to accept a safety/legal notice (see fig. 17), warning you about the responsibilities involved in the product use while navigating.

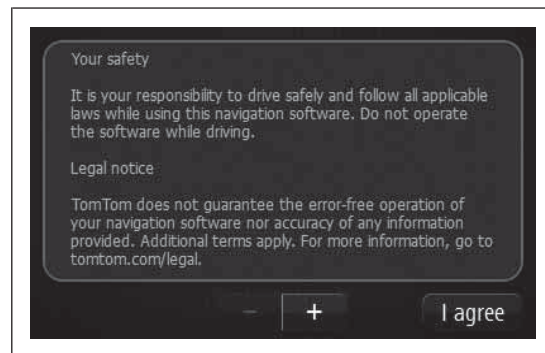 


fig. 17

F0Y1250

PLANNING A ROUTE



In the interest of safety and to reduce distractions while you are driving, you should always plan a route before you start driving.

To plan a route, do the following:

- tap the screen to open the Main menu fig. 18;
- select "Navigate to" or "Drive to";
- select "Address": you can change the country or state setting by tapping the flag before you select a city;
- enter the town or city name, or the postcode. Towns with similar names are shown in the list while you type;

Tip: Tap the arrow to the right of the list to expand the list of suggested towns.

When the correct city or town appears in the list, tap the name to select the destination fig. 19.



fig. 18

F0Y1200

- enter the street name. Streets with similar names are shown in the list while you type. When the correct street name appears in the list, tap the name to select the destination fig. 20;
- enter the house number, then tap "Done" fig. 21;
- the location is shown on the map. Tap "Select" to continue or tap "Back" to enter another address fig. 22;



fig. 19

F0Y1201



fig. 20

F0Y1202

Tip: If you want your final destination to be a car park, tap "Car park" and select a location from the list of car parks close to your general destination.

□ when the new route is shown, tap "Done". For more information about the route, tap "Details" fig. 23. To change your route, for example, to travel via a particular location or to select a new destination, tap "Change route". You are guided you to your destination, using spoken instructions and on-screen directions.

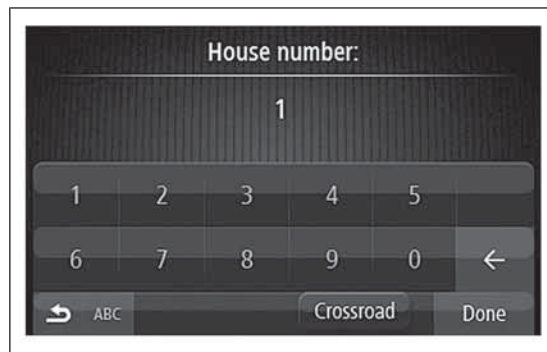 


fig. 21

F0Y1203

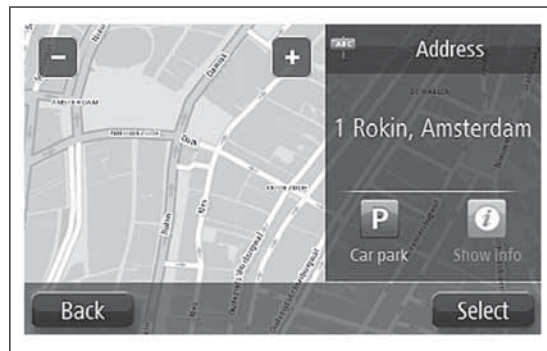 


fig. 22

F0Y1204



fig. 23

F0Y1205

ROUTE SUMMARY

The route summary shows an overview of your route, the remaining distance to your destination and the remaining estimated journey time fig. 24.

To view the route summary, tap the right-hand panel on the status bar in the "Driving view" (see chapter "Driving view") or tap "View route" in the Main Menu and then tap "Show route summary".

If you receive RDS-TMC, the route summary also shows traffic information about the delays on your route.

ALTERNATIVE ROUTES

Your TomTom navigation system helps you reach your destination as quickly as possible by showing you a faster alternative route when one is available.

Select "Yes" fig. 25 to follow the alternative route. If you don't want to follow the alternative route, select "No".



fig. 24

F0Y1206

To change how you are asked about alternative routes, tap "Settings" and then "Route planning". Tap "Route types" and then "Next" until you reach "Replanning settings".

SELECTING A ROUTE TYPE

Every time you plan a route, you can choose to be asked about the type of route you want to plan.

Tap "Settings" followed by "Route planning", then "Route types". Tap "Ask me every time I plan".

The types of route you can choose from are as follows fig. 26:

- ☐ "Fastest route": the route which takes the least time;
- ☐ "Eco route": the most fuel-efficient route for your journey;
- ☐ "Shortest route": the shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city;
- ☐ "Avoid motorways": a route which avoids motorways.

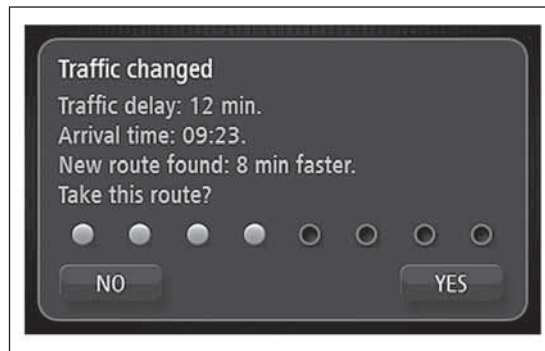 


fig. 25

F0Y1207

USING ARRIVAL TIMES

You can set your navigation system to ask you if you need to arrive at a particular time when you plan a route.



Tap "Status bar" in the Settings menu, to enable or disable arrival time notifications.

To enable arrival time notifications, select "Leeway".

After entering a destination, tap "YES" when asked to enter a preferred arrival time.

The navigation system calculates your arrival time and shows you whether you will arrive on time.

You can also use this information to work out when you need to leave. If route planning shows that you will arrive 30 minutes early, you can wait and leave in 30 minutes time, rather than arrive early.



fig. 26

F0Y1208

Your arrival time is constantly recalculated during your journey. The status bar shows whether you will arrive on time or if you are going to be late, as shown below:

- ☐ + 55^{min.} : you will arrive 55 minutes before the arrival time you entered. If the estimated arrival time is more than five minutes before the time you entered, it is shown in green.
- ☐ + 3^{min.} : you will arrive 3 minutes before the arrival time you entered. If the estimated arrival time is less than 5 minutes before the time you entered, it is shown in yellow.
- ☐ - 19^{min.} : you will arrive 19 minutes late. If the estimated arrival time is later than the time you entered, it is shown in red.

NAVIGATION MENU OPTIONS

When you tap "Navigate to" or "Drive to", you can set your destination in many ways, not just by entering the address.

The other options are listed below:



"Home": tap this button to navigate to your Home location. You will probably use this button more than any other.



"Favourite": tap this button to select a Favourite as your destination.



"Address": tap this button to enter an address as your destination.



"Recent destination": tap this button to select your destination from a list of places you have recently used as destinations.



"Point of interest": tap this button to navigate to a Point of Interest (POI).



"POI on the map": touch this button to create a POI using the map browser. Use the cursor to select the POI position, then touch "Done".



"Latitude Longitude": tap this button to enter a destination using latitude and longitude values.



"Position of last stop": tap this button to select your last recorded position as your destination.


PLANNING A ROUTE IN ADVANCE

You can use your navigation system to plan a route in advance, selecting your starting point and your destination.

This is useful for the following reasons:

- ☐ find out how long a journey is going to take before you start;
- ☐ you can compare journey times for the same route at different times of the day or on different days of the week. Navigation uses IQ Routes when planning a route. IQ Routes calculates routes based on the real average speeds measured on roads;
- ☐ study the route of a journey you are planning;
- ☐ check a route for someone who is coming to visit you and then explain the route to them in detail.

To plan a route in advance, follow these steps:

- ☐ tap the screen to bring up the Main menu;
- ☐ tap "Change route"  ;
- ☐ select the starting point for your journey in the same way that you would select your destination;
- ☐ set the destination for your journey;

☐ If "Route planning" settings are set to "Ask me every time I plan", select the type of route you want to plan:

- "Fastest route": the route which takes the least time;
- "Eco route": the most fuel-efficient route for your journey;
- "Shortest route": the shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city;
- "Avoid motorways": a route which avoids motorways;

☐ choose the date and time that you will make the journey you are planning.

Navigation uses IQ Routes to work out the best possible route at that time. This is useful to see how long a journey takes at different times of the day or on different days of the week.

Your navigation system plans the route between the two locations you selected.

VIEWING ROUTE INFORMATION

You can access these options for the route you last planned by tapping "View route" in the Main Menu or the "Details" button on the route summary screen.

You can then select from the following options:



"Show instructions": tap this button for a list of all the turn instructions on the route. This is very useful if you need to explain a route to someone else.



"Show map of route": tap this button to see an overview of the route using the map browser.



"Show route demo": tap this button to watch a demo of the journey. You can interrupt the demo at any time by tapping the screen.



"Show route summary": tap this button to open the route summary screen.



"Show destination": tap this button to see a preview of your destination. You can navigate to a car park near your destination, and view any available information about your destination, for example, the phone number.



"Show traffic on route": tap this button to see all the traffic incidents on your route. This button is only shown if your navigation system receives RDS-TMC.

DRIVING VIEW

ABOUT DRIVING VIEW

When your TomTom navigation system starts for the first time, you are shown the "Driving View" along with detailed information about your current position.

Tap the centre of the screen at any time to open the Main Menu.

DRIVING VIEW

The information shown on the display when navigating is the following fig. 27:

- ☐ A - Zoom button: tap the magnifying glass to show buttons for zooming in and out.
- ☐ B - Quick menu: to enable the quick menu, tap "Make your own menu" (see "Settings" chapter) in the Settings menu. If there are only one or two buttons in your menu, both buttons are shown in the "Driving view".
- ☐ C - Your current position.

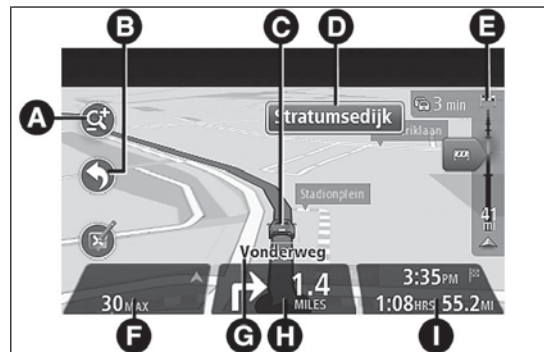 


fig. 27

F0Y1210

- ❑ D - Road sign information or the next street name.
- ❑ E - Traffic sidebar. Tap the sidebar to see details of traffic incidents on your route. The traffic sidebar is only shown if your navigation system receives RDS-TMC.
- ❑ F - The speed limit, if known. To see the difference between your preferred arrival time and your estimated arrival time, check the Leeway checkbox in the Status bar settings. Tap this part of the status bar to switch between a 3D map and a 2D map.
- ❑ G - Name of the street you are on.
- ❑ H - Navigation instruction for the road ahead and the distance to next instruction. If the second instruction is less than 150 m after the first instruction, you see it shown immediately instead of the distance. Tap this part of the status bar to repeat the last voice instruction.
- ❑ I - The remaining journey time, the remaining distance and your estimated arrival time. Tap this part of the status bar to open the Route Summary screen.

To change the information shown in the status bar, tap "Status bar" in the Settings menu.

DRIVING VIEW SYMBOLS

- ✦ Navigation instructions muted - this symbol is shown when the navigation instructions have been muted. To hear navigation instructions again, tap the middle panel in the status bar.

ABOUT REPLANNING SETTINGS

Your TomTom navigation system helps you reach your destination as quickly as possible by showing you a faster alternative route when one is available.

To change how you are asked about alternative routes, tap "Settings" and then "Route planning".

Tap "Route types" and then "Next" until you reach "Replanning settings".

Note This button is only shown if your navigation system receives RDS-TMC.

Set whether you want your navigation system to replan the current route if a faster route is found while you are driving.

This is useful if traffic builds up or clears further ahead on your route. Choose from the following settings:

- ☐ "Always switch to that route": select this option to receive no messages when a faster route is found. The current route is automatically re-calculated to be the fastest one.
- ☐ "Ask me if I want that route": select this option to be asked if you want to take the new route. When asked if you wish to take the alternative route, tap "Yes" to have the current route re-calculated as the fastest one. If you don't want to follow the alternative route, select "No". Tap "Info" to see a summary of both the original and alternative routes. You can then tap "Done" to take the fastest route or "Current route" to remain on your original route.
- ☐ "Never change my route": select this option if you do not want your navigation system to calculate a new route when the traffic situation changes.

ADVANCED LANE GUIDANCE

ABOUT LANE GUIDANCE

Note Lane guidance is not available for all junctions or in all countries.

Your navigation system helps you prepare for motorway exits and junctions by showing the correct driving lane for your planned route.

As you approach an exit or junction, the lane you need is shown on the screen.

USING LANE GUIDANCE

There are two types of lane guidance:

Lane images fig. 28

To turn lane images off, tap "Settings" in the Main menu, then tap "Advanced settings".



fig. 28

F0Y1211

Clear the checkbox for "Show lane images".

Tip: Tap anywhere on the screen to return to the "Driving View".

Instructions in the status bar fig. 29

Tip: If no lane guidance is shown in the status bar and all lanes are highlighted, you can use any lane.

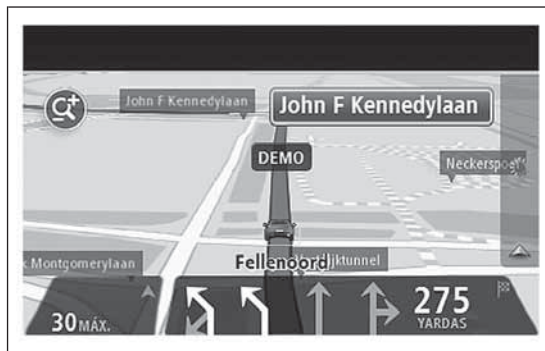 


fig. 29

F0Y1212

CHANGING YOUR ROUTE

MAKING CHANGES TO YOUR ROUTE

After you plan a route, you may want to change the route or even the destination.

There are various ways to change your route without the need to completely replan the entire journey.

To change the current route, tap "Change route" in the Main menu.



"Change route": tap this button to change the current route. This button is only shown while there is a planned route.

CHANGE ROUTE MENU

To change the current route or your destination, tap one of the following buttons:



"Change destination": tap this button to change the current destination. When you change the destination, you are shown the same options and asked to enter the new address in the same way as when you plan a new route.



"Avoid roadblock": tap this button while driving on a planned route, to avoid a roadblock or traffic congestion on the road ahead. Your navigation system will suggest a new route which avoids the roads on your current route for the selected distance. When a new route is calculated, you might immediately be asked to turn off the current road.



"Calculate alternative": tap this button to find an alternative to the current route. This button is only shown while there is a planned route. This is a simple way to search for a different route to your current destination. Your navigation system calculates a new route from your current location, to reach your destination using completely different roads. The new route is shown next to the original route so that you can select the route you want to use.



"Travel via...": tap this button to change your route by selecting a location you want to travel past. When you select a location to travel past, you are shown the same options and asked to enter the new address in the same way as when you plan a new route. Your navigation system calculates the route to your destination via the selected location. The selected location is shown on the map using a marker. You will hear a warning sound when you reach your destination and when you travel past a marked location.



"Avoid part of route": tap this button to avoid part of the current route. You are shown a list of the street names on your route. When you tap one of the street names, your navigation system calculates a detour to avoid the selected street. The route summary shows both the new route and your original route. Tap the panel on the right to select one of the routes and then tap "Done". If you do not want to use either of the routes shown in the route summary, tap "Change route" to find another way to change your route.



"Minimise delays": tap this button to avoid traffic delays on a planned route. It is not always possible to avoid all traffic delays. Though your system continuously checks for delays on your route, you can tap this button to manually start a check. Your system then calculates the best route to avoid all or most of the delays.

IMPORTANT This graphic button is only shown if your navigation system receives RDS-TMC.

ABOUT WAYPOINTS

You can choose to use waypoints for any of the following reasons:

- ☐ you want to travel along a certain road or through a certain area on the way to your destination;
- ☐ you want to make stops before reaching your final destination.

When entering a city centre as waypoint, the system will plan a route passing through the area surrounding this city, avoiding the route passing through the position of city centre.

The system may not find a route passing through a city centre with a disadvantaged position compared to the actual route.

ADDING THE FIRST WAYPOINT TO YOUR ROUTE

To add the first waypoint to your route, do the following:

- ☐ tap the screen to bring up the Main menu;
- ☐ Tap "Change route";
- ☐ Tap "Travel via";

Tip: You can also use the suitable voice control to add waypoints.

- ❑ choose the location for your waypoint from a choice of "Home", "Favourite", "Address", "Recent destination", "POI", "Longitude/latitude", "Position of last stop" or you can perform a search. On the route summary screen, a message confirms that the route is being recalculated to include the waypoint. In the "Change route" menu, the "Travel via" button changes to show that you now have one waypoint on your current route.

ADDING FURTHER WAYPOINTS TO YOUR ROUTE

To add more waypoints to your route after the first one has been added, do the following:

- ❑ tap the screen to bring up the Main menu;
- ❑ tap "Change route";
- ❑ Tap "Travel via";

Tip: You can also use the suitable voice control to add waypoints.

- ❑ tap "Add";
- ❑ choose the location for your waypoint from a choice of "Home", "Favourite", "Address", "Recent destination", "POI", "Longitude/latitude", "Position of last stop" or you can perform a search. A message tells you where in the list of waypoints the new one has been inserted;
- ❑ tap "Done". On the route summary screen, a message confirms that the route is being recalculated to include your waypoints;
- ❑ repeat to add more waypoints. On the "Change route" menu, the "Travel via" button changes to show that you now have several waypoints on your current route.

CHANGING THE ORDER OF WAYPOINTS

Waypoints are automatically added in an optimised order but you can still change the order manually if you need to.

To change the order of waypoints, do the following:

- ❑ tap the screen to bring up the Main menu;
- ❑ Tap "Change route";
- ❑ tap "Travel via": you see a list of your waypoints;
- ❑ tap the waypoint you want to move up or down. You see a screen with the name of your waypoint at the top;
- ❑ tap "Move up" or "Move down". Your waypoint changes its position in the list and you are immediately returned to your list of waypoints.

Tip: You cannot move an unvisited waypoint into a list of already visited waypoints.

DELETING A WAYPOINT

To delete a waypoint, do the following:

- ❑ tap the screen to bring up the Main menu;
- ❑ Tap "Change route";
- ❑ tap "Travel via": you see a list of your waypoints;
- ❑ tap the waypoint you want to delete. You see a screen with the name of your waypoint at the top;
- ❑ tap "Delete": your waypoint is deleted and you are immediately returned to your list of waypoints.

REACTIVATING A WAYPOINT

Note You can only reactivate a waypoint that has already been visited. Visited waypoints are greyed out.

To reactivate a waypoint, do the following:

- ☐ tap the screen to bring up the Main menu;
- ☐ tap "Change route";
- ☐ tap "Travel via": you see a list of your waypoints;
- ☐ tap the visited waypoint that you want to reactivate. You see a screen with the name of your waypoint at the top;
- ☐ tap "Reactivate". The waypoint is deleted and reinserted into the list of waypoints that haven't yet been visited.

VIEW MAP

ABOUT VIEWING THE MAP

You can view the map in the same way as you might look at a traditional paper map.

The map shows your current location and many other locations such as "Favourites" and "POIs".

To view the map in this way, tap View map or View route, then Show map of route in the Main menu.

You view different locations on the map by moving the map across the screen. To move the map, touch the screen and drag your finger across the screen.

VIEW MAP

The further information displayed on the map is fig. 30:

- ☐ A - Scale bar.
- ☐ B - Traffic: current traffic incidents. Use the "Options" button to select whether traffic information is shown on the map. When traffic information is shown on the map, "POIs" and "Favourites" are not shown.

Note Traffic information is only available if you have an RDS-TMC receiver.

- ☐ C - "Options" button.
- ☐ D - "Find" button. Tap this button to find specific addresses, "Favourites" or "POIs";
- ☐ E - Zoom bar. Zoom in and out by moving the slider.

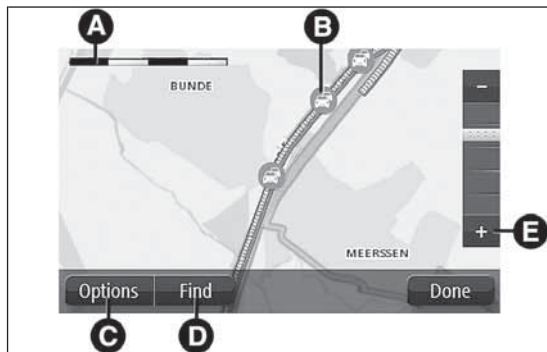 


fig. 30

F0Y1213

OPTIONS

Tap the "Options" button to set the information shown on the map and show the following information:

- ☐ "Traffic": select this option to show traffic information on the map. When traffic information is shown, "POIs" and "Favourites" are not shown.

Note Traffic information is only available if you have an RDS-TMC receiver.

- ☐ "Names": select this option to show street and city names on the map.
- ☐ "Points of interest": select this option to show POIs on the map. Tap "Choose POIs" to choose which POI categories are shown on the map.
- ☐ "Favourites": select this option to show your "Favourites" on the map.
- ☐ "Coordinates": select this option to show GPS coordinates in the lower left corner of the map.

SETTINGS

ABOUT SETTINGS

You can change the way your navigation system looks and behaves.

Most of the settings on your system can be accessed by tapping "Settings" in the Main Menu.

2D/3D SETTINGS



2D/3D settings: tap this button to set the default view of the map.

To switch between 2D and 3D views while driving, tap the left side of the status bar in Driving View.

It is sometimes easier to view the map from above, such as when navigating a complex road network.

The 2D view shows a two dimensional view of the map as though viewed from above.

The 3D view shows a three dimensional view of the map as though you are driving through the landscape.

The following buttons are available:

- ☐ *In 2D view: rotate map in direction of travel* - tap this button so the map is rotated automatically with the direction you are travelling always at the top.
- ☐ *Switch to 3D view when following a route*: tap this button to show the map automatically in 3D view when you are following a route.

ADVANCED SETTINGS



Advanced settings: tap this button to select the following advanced settings:

- ☐ *Show house number before street name*: when this setting is selected, addresses are shown with the house number followed by the street name, such as 10 Downing Street.
- ☐ *Show street names*: when this setting is selected, street names are shown on the map in the "Driving View".
- ☐ *Show next street name*: when this setting is selected, the name of the next street on your route is shown at the top of the "Driving view".
- ☐ *Show current street name on map*: when this setting is selected, the name of the street you are on is shown at the bottom of the "Driving view".
- ☐ *Show location preview*: when this setting is selected, a graphical preview of your destination is shown during route planning.
- ☐ *Enable automatic zooming in 2D view*.
- ☐ *Enable automatic zooming in 3D view*.

- ❑ *Show lane images*: when this setting is selected, a graphical view of the road ahead shows which lane you need when you approach a junction or motorway exit. This feature is not available for all roads.
- ❑ *Show tips*: this setting switches tips on and off.

CAR SYMBOL



Car symbol: tap this button to select the car symbol that shows your current location in the Driving view.

FAVOURITES



Favourites: tap this button to add, rename or delete "Favourites". "Favourites" provide an easy way to select a location without the need to enter the address. They do not need to be favourite places, they can simply be seen as a collection of useful addresses. To create a new "Favourite", tap "Add" fig. 31. Enter the location address in the same way that you enter an address when you plan a route. To view or change an existing "Favourite", tap one of the items in the list fig. 32. To see more "Favourites" on the map, tap the left or right buttons.

GPS STATUS



GPS status: tap this button to see the current status of GPS reception on your navigation system.

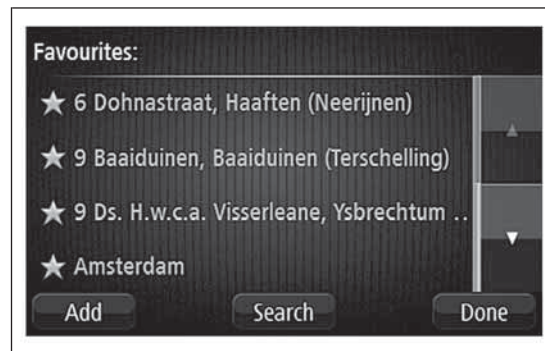 


fig. 31

F0Y1216



fig. 32

F0Y1216

HOME LOCATION



Home location: tap this button to set or change your Home location. Enter the address in the same way as you do when you plan a route. Your Home location provides an easy way to plan a route to an important location. For most people, your Home location will be your home address. However, you might prefer to set the location to another regular destination, such as your workplace.

KEYBOARD



Keyboard: tap this button to select the keyboards that will be available for your use and the layout of the Latin keyboard. You use the keyboard to enter names and addresses, such as when you plan a route or search for the name of a town or a specific restaurant.

MAKE YOUR OWN MENU



Make your own menu: tap this button to add up to six buttons to your own personalised menu. If there are only one or two buttons in your menu, both buttons are shown in the "Driving view". If you have three or more buttons in your menu, then a single button is shown in the "Driving view" which opens your menu when tapped.

MANAGE POIs



Manage POIs: tap this button to manage your own Point of Interest (POI) categories and locations. You can set your navigation system to let you know when you are near to selected POI locations. For example, you could set the navigation system to let you know when you are approaching a petrol station.

You can also create your own POI categories and add your own POI locations to these categories. You can, for example, create a new POI category called "Friends". You could then add all your friends' addresses as POIs in this new category.

Tap the following buttons to create and maintain your own POIs:

- ☐ **Add POI:** tap this button to add a location to one of your own POI categories.
- ☐ **Warn when near POI:** tap this button to set your system to warn you when you are near selected POIs.
- ☐ **Delete POI:** tap this button to delete a POI.
- ☐ **Edit POI:** tap this button to edit one of your own POIs.
- ☐ **Add POI category:** tap this button to create a new POI category.
- ☐ **Delete POI category:** tap this button to delete one of your own POI categories.

MAP COLOURS



Map colours: tap this button to select the colour schemes for day and night map colours for 2D and 3D mode. Tap "Search" to search for a colour scheme by typing the name.

ME AND MY NAVIGATION



Me and my navigation: tap this button to find technical information about your navigation system and to select whether you want to share information with TomTom.

A menu opens with the following options:



About my system: tap this button to find technical information about your navigation system, such as the serial number, the application version and the map version.



My information: tap this button to change whether you want to share information with TomTom.

RESET FACTORY SETTINGS



Reset factory settings: tap this button to delete all your personal navigation settings and restore the standard factory settings to your navigation system. This is not a software update and will not affect the version of the software application installed on your system.

IMPORTANT This feature deletes all your personal settings! If you want to keep your personal information and settings, you should perform a full backup before you reset the navigation system. You can then restore all your personal information and settings after the reset. This includes items such as your Home and Favourite locations, your personal menu and your POI categories and POI locations.

ROUTE PLANNING



Route planning: tap the "Route planning" button to set the way your navigation system calculates the routes that you plan. Tap the button for each option to change the settings.

Route types

Set the type of route you want your navigation system to calculate.

Toll roads, Ferries, Carpool lanes and Unpaved roads settings

Sets how your navigation system should manage each of these road features when the system calculates a route.

Carpool lanes are sometimes known as High Occupancy Vehicle Lanes and are not present in every country. To travel on these lanes, you may need to have more than one person in the car, for example, or the car may need to use environmentally-friendly fuel.

Route summary

Set whether you want the route summary screen to close automatically after you plan a route.

If you select "No", then you will need to tap "Done" to close the route summary screen every time you plan a route.

SAFETY SETTINGS



Safety settings: tap this button to select the safety features you want applied to your navigation.

SHOW POI ON MAP



Show POI on map: tap this button to select the types of Point of Interest (POI) you want to see on the map.

Do the following:

- ☐ tap "Show POI on map" in the Settings menu;
- ☐ select the POI categories you want to be shown on the map. Tap "Search" and use the keyboard to search for a category name;
- ☐ select whether you want POIs to be shown in 2D or 3D views of the map;
- ☐ tap "Done".

Point of Interest locations are shown on the map as symbols.

STATUS BAR



Status bar: tap this button to select the information you want to see on the status bar:

- ☐ *Horizontal:* shows the status bar at the bottom of the "Driving view";
- ☐ *vertical:* shows the status bar on the right-hand side of the "Driving view";
- ☐ *Maximum speed:* if you drive faster than the speed limit, you see a warning indicator in the status bar, for example the status bar pane turns red. Information about speed limits is not available for all roads.
- ☐ *Remaining distance:* the distance to your destination.
- ☐ *Leeway:* your navigation system shows how late or early you will arrive, compared with your preferred arrival time that was set when you planned the route.

SWITCH MAP



Maps: tap this button to select the map you want to use for route planning and navigation. Although you can store more than one map on the navigation system, you can only use one map at a time for planning and navigation.

To switch from the current map to plan a route in another country or region, simply tap this button.

TURN OFF VOICE GUIDANCE / TURN ON VOICE GUIDANCE



Turn off Voice guidance (red button): tap this button to turn off voice guidance. You will no longer hear spoken route instructions but you will still hear information such as traffic information and warnings. Voice guidance is also turned off when the main unit volume is muted.

Turn on Voice guidance (green button): tap this button to turn on voice guidance and hear spoken route instructions.

UNITS



Units: tap this button to set the units used for navigation features such as route planning.

USE NIGHT COLOURS / USE DAY COLOURS



Use night colours: tap this button to display the map in darker colours. Tip: Your navigation system can switch between day and night colours depending on the time of day. To automatically switch between night and day colours, tap "Map colours" in the Settings menu and select "Switch to night colours when dark".



Use day colours: tap this button to display the map in brighter colours.

VOICES



Voice settings: tap this button to set the type of spoken directions and other route instructions that your navigation system will read aloud.

START



Start: touch this button to choose if the request for consent to the processing of data must be displayed or not displayed every time the device is started.

NAVIGATION UPDATES



Navigation updates: touch this button if you wish to prepare a USB device for the map updates. For more information see the "Map update" chapter.

POINTS OF INTEREST

ABOUT POINTS OF INTEREST


Points of Interest or POIs are useful places on the map.

A few examples of POIs are listed below:

- ☐ Restaurants
- ☐ Hotels
- ☐ Museums
- ☐ Parking garages
- ☐ Petrol stations

CREATING POINTS OF INTEREST

Do the following:

- ☐ tap the screen to open the Main menu;
- ☐ tap "Settings";
- ☐ tap "Manage POIs";
- ☐ if there are no POI categories or the one you want to use does not exist, tap "Add POI category"  and create a new category. Every POI must be assigned to a POI category. This means you need to have created at least one POI category before you can create your first POI. You can only add POIs to POI categories you have created. For more information on creating POI categories, read "Managing POIs.";
- ☐ tap "Add POI";
- ☐ select the POI category you want to use for the new POI;
- ☐ tap a button to enter the POI address in the same way that you plan a route;

- ☐ the POI is created and saved in the selected category.



Home: tap this button to set your Home location as a POI. This is useful if you decide to change your Home location, but first want to create a POI using the current Home address.



Favourite: tap this button to create a POI from a Favourite. You might want to create a POI from a "Favourite" because you can only create a limited number of Favourites. If you want to create more "Favourites" you need to delete some Favourites. To avoid losing a "Favourite", save the location as a POI before you delete the "Favourite".



Address: tap this button to enter an address as a new POI. When you enter an address, you can choose from four options: "City centre", "House number", "Postcode", "Crossing or intersection".



Recent destination: tap this button to select a POI location from a list of places you have recently used as destinations.



Point of interest: tap this button to add a Point of Interest (POI) as a POI. For example, if you are creating a category of POIs for your favourite restaurants, use this option instead of entering the addresses of the restaurants.



My location: tap this button to add your current location as a POI. For example, if you stop somewhere interesting, you can tap this button to create a new POI at the current location.



POI on the map: touch this button to create a POI using the map browser. Use the cursor to select the POI position, then touch "Done".



Latitude Longitude: tap this button to create a POI by entering latitude and longitude values.



Position of last stop: tap this button to select the last position where you stopped.

USING POINTS OF INTEREST TO PLAN A ROUTE

When you plan a route, you can use a POI for the destination or as a waypoint.

The following example shows how to plan a route to a car park in a city:

- ☐ Tap "Navigate to" or "Drive to" in the Main menu;
- ☐ Tap "Point of Interest";
- ☐ Touch "POI in city";

Tip: The last POI you viewed on your navigation system is also shown in the menu;

- ☐ enter the name of the town or city and select it when it is shown in the list;
- ☐ touch the "arrow" button to expand the list of POI categories;

Tip: If you already know the name of the POI you want to use, you can touch "Search by name" to enter the name and select this location.

- ☐ scroll the list and touch "Parking": the parking lot closest to the town centre is displayed on the top of the list.

The following list explains the distances shown next to each POI. How the distance is measured varies depending on how you initially searched for the POI:

- ☐ *POI near you:* distance from your current location;
- ☐ *POI in city:* distance from the city centre;
- ☐ *POI near Home:* distance from your Home location;
- ☐ *POI along route:* distance from your current location;
- ☐ *POI near destination:* distance from your destination;
- ☐ Touch the name of the car park you want to use and touch "Done" when the route has been calculated.

Your navigation system starts to guide you to the car park.

SHOWING POINTS OF INTEREST ON THE MAP

You can select the types of POI locations you want to see on your maps.

Do the following:

- ☐ tap "Show POI on map" in the Settings menu;
- ☐ select the categories you want to be shown on the map;
- ☐ tap "Done";
- ☐ Select whether you want to see POI locations in 2D and 3D views of the map;
- ☐ tap "Done".

The types of POI you have selected are shown as symbols on the map.

SETTING WARNINGS FOR POINTS OF INTEREST

You can set a warning sound to be played when you approach a selected type of POI, such as a petrol station.

The following example will show how to set a warning sound to be played when you are 250 metres from a petrol station.

Do the following:

- ☐ tap "Manage POIs" and then "Warn when near POI" in the Settings menu;
- ☐ scroll down the list and tap "Petrol station". Tip: To remove a warning, tap on the category name and then tap "Yes". POI categories which have been set with a warning have a sound symbol next to the category name;
- ☐ set the distance as 250 metres and tap "OK";
- ☐ select "Sound effect" and then tap "Next";
- ☐ select the warning sound for the POI and then tap "Next";
- ☐ if you only want to hear the warning when the POI is directly on a planned route, select "Warn only if POI is on route", then tap "Done". The warning is set for the selected POI category. You will hear a warning sound when you are 250 metres from a petrol station on your route.

MANAGING POINTS OF INTEREST

Tap "Manage POIs" to manage your POI categories and locations.



You can set your navigation system to let you know when you are near to selected POI locations. For example, in this way you could set the navigation system to let you know when you are approaching a petrol station.

You can create your own POI categories and add your own POI locations to these categories.

This means you can, for example, create a new POI category called "Friends". You can thus add your friends' addresses as POIs in this new category.

Tap the following buttons to create and maintain your own POIs:

- ☐ **Add POI:** tap this button to add a location to one of your own POI categories;
- ☐ **Warn when near POI:** tap this button to set your system to warn you when you are near selected POIs;
- ☐ **Delete POI:** tap this button to delete one of your own POI categories;
- ☐ **Edit POI:** tap this button to edit one of your own POIs;
- ☐ **Add POI category:** tap this button to create a new POI category;
- ☐ **Delete POI category:** tap this button to delete one of your own POI categories.

HELP

ABOUT GETTING HELP

Tap "Help" in the Main menu to navigate to emergency services centres and other specialist services.

For example, if you are involved in a car accident, you could use the "Help" menu to find the contact details for the nearest hospital, call them using a phone and tell them your exact location.

IMPORTANT If you do not see the "Help" button in the Main menu, tap "Settings" and then "Safety settings". Clear the checkbox to show only essential menu options while driving.

USING HELP TO PHONE A LOCAL SERVICE

To use "Help" to locate a service centre, contact the centre by phone and navigate from your current location to the centre, do the following:

- ☐ tap the screen to bring up the Main menu;
- ☐ tap "Help";
- ☐ tap "Phone for help";
- ☐ select the type of service you require, for example, "Nearest hospital";
- ☐ select a centre from the list, the nearest is shown at the top of the list. Your navigation system shows your position on the map along with a description of the location. This helps you explain where you are while making a call. The phone number is displayed for you to call using a phone;
- ☐ to navigate your way to the centre by car, tap "Navigate there".

Your navigation system starts guiding you to your destination.

HELP MENU OPTIONS

Note In some countries, information may not be available for all services.



Phone for help: tap this button to find the contact details and location of a service centre.



Drive to help: tap this button to plan a driving route to a service centre.



Where am I?: tap this button to see your current location on the map.



Safety and other guides: tap this button to read a selection of guides, including a First Aid guide.



Guided tours: tap this button to view a selection of guided tours relating to your navigation system.



What to say: tap this button to see a list of commands you can say when using voice control.

FAVOURITES

ABOUT FAVOURITES

"Favourites" provide an easy way to select a location without the need to enter the address.

They do not need to be favourite places, they can simply be seen as a collection of useful addresses.

USING A FAVOURITE

You can use a "Favourite" as a way of navigating to a place without having to enter the address.

To navigate to a "Favourite", do the following:

- ☐ tap the screen to bring up the Main menu;
- ☐ Tap "Navigate to" or "Drive to";
- ☐ tap "Favourite";
- ☐ select a "Favourite" from the list. Your navigation system calculates the route for you;
- ☐ When the route is calculated, tap "Done".

Your navigation system immediately starts guiding you to your destination with spoken instructions and visual instructions on the screen.

CHANGING THE NAME OF A FAVOURITE

To change the name of a Favourite, do the following:

- ☐ tap the screen to bring up the Main menu;
 - ☐ tap "Settings" to open the Settings menu;
 - ☐ tap "Favourites";
 - ☐ tap the "Favourite" you want to rename;
- Tip: Use the left and right arrows to choose another Favourite from your list.
- ☐ tap "Rename";
 - ☐ type in the new name and then tap "Done";
 - ☐ tap "Done" again.

DELETING A FAVOURITE

To delete a Favourite, do the following:

- ☐ tap the screen to bring up the Main menu;
 - ☐ tap "Settings" to open the Settings menu;
 - ☐ tap "Favourites";
 - ☐ tap the "Favourite" you want to delete;
- Tip: Use the left and right arrows to choose another Favourite from your list.
- ☐ tap "Delete";
 - ☐ Tap "Yes" to confirm the deletion;
 - ☐ tap "Done".

TRAFFIC

ABOUT RDS-TMC

The Traffic Message Channel (TMC), also known as RDS-TMC, transmits traffic information as a radio signal and is available free of charge in many countries.

IMPORTANT TomTom is not responsible for the availability or quality of traffic information provided by the Traffic Message Channel.

USING TRAFFIC INFORMATION

The "Traffic" sidebar is shown on the right side of the "Driving View".

The sidebar fig. 33 informs you about traffic delays while you drive, using glowing dots to show you where each traffic incident is located on your route.

- *Top of the traffic sidebar (A):* represents your destination and shows the total time delay due to traffic jams and other incidents on your route.
- *Central section of the traffic sidebar (B):* shows individual traffic incidents in the order they occur on your route.
- *Bottom of the traffic sidebar (C):* represents your current location and shows the distance to the next incident on your route.

To make the "Traffic" sidebar more readable some incidents may not be shown. These incidents will always be of minor importance and only cause short delays.

The colour of the pointer ►, as shown below, gives you an instant indication of the type of incident:

- *grey pointer:* unknown or undetermined situation;
- *orange pointer:* slow traffic;
- *red light pointer:* queuing traffic;
- *dark red pointer:* stationary traffic or road closure.

TAKING THE FASTEST ROUTE

Your navigation system regularly looks for a faster route to your destination.

If the traffic situation changes and a faster route is found, your system offers to replan your journey so you can use the faster route.

You can also set your navigation system to automatically replan your journey whenever a faster route is found.

To apply this setting, tap "Traffic settings" in the Traffic menu.

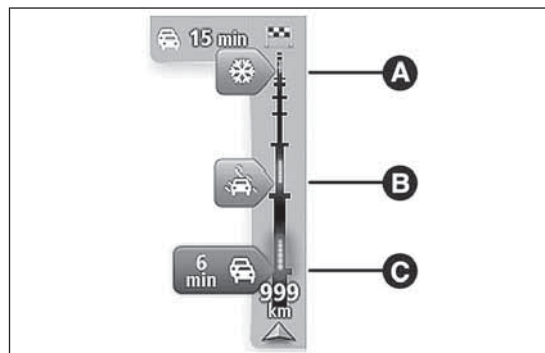 


fig. 33

F0Y1217

To manually find and replan the fastest route to your destination, do the following:

- ☐ tap the Traffic sidebar. If you find that tapping the sidebar opens the Main menu instead of the Traffic menu, try tapping the sidebar with your finger resting on the edge of the screen. A summary of traffic on your route is shown on the screen;
- ☐ tap "Options";
- ☐ tap "Minimise delays": your system searches for the fastest route to your destination. The new route may include traffic delays. You can replan the route to avoid all traffic delays, but a route which avoids all delays will usually take longer than the fastest route;
- ☐ tap "Done".

MINIMISING DELAYS

You can use traffic information to minimise the impact of traffic delays on your route.

To switch on this setting and to minimise delays, do the following:

- ☐ tap "Services" in the Main Menu;
- ☐ tap "Traffic";
- ☐ tap "Traffic settings";
- ☐ tap "Minimise delays". Your navigation system plans the quickest route to your destination. The new route may include traffic delays and may remain the same as the original route. You can re-plan the route to avoid all delays, but this route is unlikely to be the quickest possible route.
- ☐ tap "Done".

MAKING COMMUTING TO WORK EASIER

The "Home to work" or "Work to home" buttons in the "Show home-work traffic" menu fig. 34 lets you check your route to and from work with one tap of a button.

When you use either of these buttons, your navigation system plans a route between your home and work locations and checks the route for possible delays.

The first time you use "Home to work", you must set your traffic "Home" and work locations by doing the following:

- ☐ tap the Traffic sidebar to open the Traffic menu. If you already have a route planned, a summary of traffic incidents on your route is shown. tap "Options" to open the Traffic menu;
- ☐ tap "Show home-work traffic";
- ☐ set your home location and your work location. If you have already set the locations and want to change them, tap ("Change home-work").

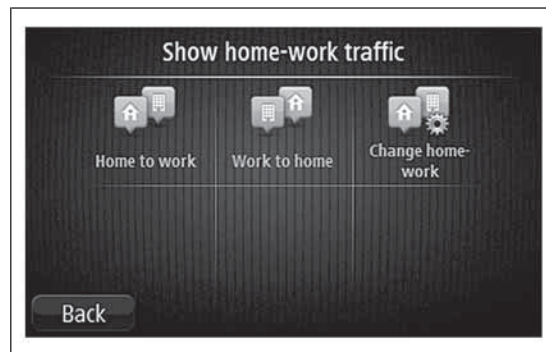 


fig. 34

F0Y1218

You can now use the "Home to work" and "Work to home" buttons.

IMPORTANT The home location you set here is not the same as the home location you can set in the Settings menu. In addition, the locations you use here do not have to be your actual home and work locations. If there is another route that you often travel, you can set "Work/Home" to use these locations instead.

For example, to check for delays on your route home before you leave the office, do the following:

- ☐ tap the Traffic sidebar to open the Traffic menu. If you already have a route planned, a summary of traffic incidents on your route is shown. tap "Options" to open the Traffic menu;
- ☐ tap "Show home-work traffic";
- ☐ tap "Work to home".

The "Driving View" is shown and a message is displayed telling you about traffic incidents on this route. The Traffic sidebar also shows any delays.

GETTING MORE INFORMATION ABOUT AN INCIDENT

To check for delays on your route, tap "Show traffic on route" in the Traffic menu. Your navigation system shows a summary of the traffic delays on your route.

The total includes any delays due to traffic incidents and those due to busy roads, with information provided by IQ Routes.

Tap "Minimise delays" fig. 35 to check if you can reduce the delay.

Tap the ◀ and ▶ fig. 36 buttons to move through each incident in turn, viewing the details of each one. This includes the type of incident, for example road works, and the length of delay caused by this incident.

When shown on the map, a traffic incident starts with an icon. In the case of a traffic queue, the direction of the incident is from the icon towards the other end.



fig. 35

F0Y1219

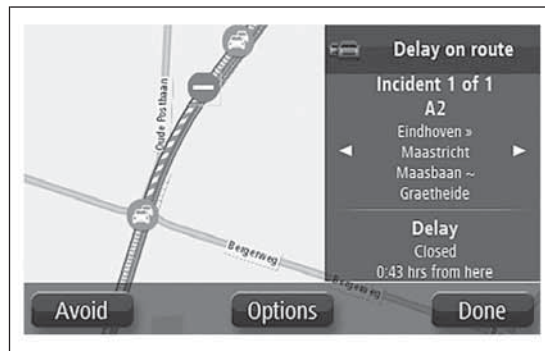 


fig. 36

F0Y1220

CHECKING TRAFFIC INCIDENTS IN YOUR AREA

Get an overview of the traffic situation in your area, using the map.


To find local incidents and their details, do the following:

- ☐ tap the Traffic sidebar then tap "Options" to open the Traffic menu;
- ☐ tap "View map": the map shows the traffic incidents fig. 37 in the area.

CHANGING TRAFFIC SETTINGS

Use the "Traffic settings" button to choose how traffic information works on your navigation system.

Do the following:

- ☐ tap the Traffic sidebar then tap "Options" to open the Traffic menu;
- ☐ touch  "Traffic settings";

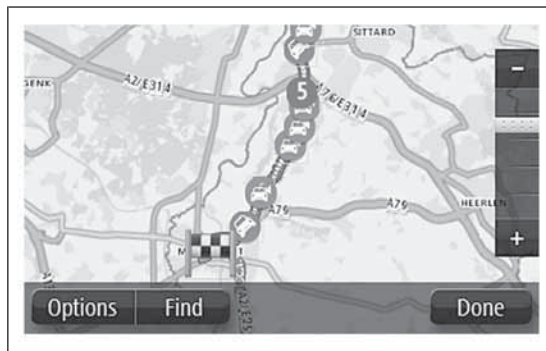 


fig. 37

F0Y1221

- ☐ if a faster route is found while you are driving, "Traffic" can replan your journey to use the faster route. Select one of the following options: "Always switch to that route", "Ask me if I want that route", "Never change my route", then tap "Done".

INCIDENTS

Traffic incidents and warnings are shown on the map, in the Driving View and on the Traffic sidebar.






There are two types of incident and warning signs:


- ☐ symbols shown in a *red square* are traffic incidents. Your navigation system can replan to avoid them;
- ☐ Symbols shown in a *red triangle* are weather related. Your system does not replan to avoid these warnings.

Traffic incident symbols:

- ☐  Traffic incident
- ☐  Road works
- ☐  One or more lanes closed
- ☐  Road closed
- ☐  Traffic incident
- ☐  Traffic jam

Weather related symbols:

-  Fog
-  Rain
-  Wind
-  Ice
-  Snow

 The incident avoided symbol is shown for any traffic incident that you avoid using a traffic service.

TRAFFIC MENU

To open the Traffic menu, tap the "Traffic" sidebar in the "Driving View" then tap "Options", or tap "Traffic" in the Services menu.

The following buttons are available:



Minimise traffic delays: tap this button to re-plan your route based on the latest traffic information.



Show home-work traffic: tap this button to calculate the quickest route from your home location to your place of work and back.



Show traffic on route: tap this button for an overview of traffic incidents along your route. Tap the left and right buttons for more detailed information about each incident. Tap "Minimise delays" to replan your route and avoid the traffic incidents that are shown on the map.



View map: tap this button to browse the map and see the traffic incidents shown on the map.



Change Traffic settings: tap this button to change your settings for how the Traffic service works on your navigation system.

SPEED CAMERAS

SPEED CAMERA INFORMATION

The Speed Cameras service warns you about the roadside camera locations:

- ☐ speed camera locations;
- ☐ accident blackspot locations;
- ☐ average speed camera locations;
- ☐ traffic light camera locations.

IMPORTANT In France, it is illegal to report and receive warnings about the position of speed cameras. Therefore, speed cameras are not available when driving in France.

SPEED CAMERA WARNINGS

By default, a warning sound is played for the most common types of speed camera. To change the warning sound, tap "Alert settings" in the Speed Cameras menu.

You are warned about speed cameras in three ways:

- ☐ the navigation system plays a warning sound;
- ☐ the type of speed camera, the distance from the camera and the speed limit are shown in the "Driving View";
- ☐ the location of the speed camera is shown on the map.

IMPORTANT For average speed check cameras, your system warns you at the start and end of the average speed check area.

CHANGING THE WAY YOU ARE WARNED



To change the way your navigation system warns you about speed cameras, tap the "Alert settings" button. You can then set what type of sound is played.

For example, to change the sound that is played when you approach a fixed speed camera, do the following:

- ☐ tap "Services" in the Main Menu;
- ☐ tap "Speed camera";
- ☐ tap "Alert settings". A list of speed camera types is displayed. A speaker is shown next to the speed camera types that have an alert set;
- ☐ tap "Fixed cameras";
- ☐ select whether you always want to be warned or warned only when you are speeding. Select "Never" to turn off the warning;
- ☐ tap the sound you want to be used for the warning;
- ☐ tap "Done".

The warning sound you selected is now set for fixed speed cameras. A speaker symbol is shown next to "Fixed cameras" in the list of types of speed camera.

SPEED CAMERA SYMBOLS

Speed cameras are shown as symbols on the "Driving View".

As you approach a camera, a symbol showing the kind of camera and the distance to the camera is displayed. A warning sound is also played.

The warning sound for speed cameras can be changed or it can be turned on and off for each speed camera.

Tap the camera symbol to report that the camera is no longer there or to confirm that its presence.

When you first start using your navigation system, warning sounds are played for these types of cameras:



Fixed speed camera: this type of camera checks the speed of passing vehicles and is fixed in one place;



Red light camera: this type of camera checks for vehicles breaking traffic rules at traffic lights;



Average speed check: these types of cameras measure your average speed between two points. You are warned at the start and end of the average speed check area. While you are driving in an average speed check area, your average speed is shown, instead of your current speed. When you are in the speed check area, the visual warning continues to be shown in the Driving View;



Accident black spot



Ungated railway crossing

When you first start using your navigation system, no warning sounds are played for these types of cameras:



Mobile camera hotspot: this type of warning shows places where mobile cameras are often used.



Restricted road camera.



Other camera.



Bidirectional camera.

REPORT BUTTON

To show the "Report" button in the "Driving View", do the following:

- ☐ tap "Services" in the main menu;
- ☐ tap "Speed camera";
- ☐ tap "Enable report button";
- ☐ tap "Back".

The report button is shown on left-hand side of the "Driving View" or if you are already using the quick menu, it's added to the buttons available in the quick menu.

Note To hide the report button, tap "Disable report button" in the Speed Cameras menu.

REPORTING A NEW SPEED CAMERA WHILE ON THE MOVE

To report a speed camera while on the move, do the following:

- ☐ tap the "Report button" in the "Driving View" or in the quick menu to record the location of the camera;
- ☐ confirm that you want to add a camera. The display will show a dedicated message.

REPORTING A NEW SPEED CAMERA AT A LATER TIME

You do not need to be at the location of a speed camera to report the new location.

To report a new speed camera location at a later time, do the following:

- ☐ tap "Services" in the Main Menu;
- ☐ tap "Speed camera";
- ☐ tap "Report speed camera";
- ☐ touch "Select the type of speed camera";
- ☐ use "Find" to mark the location of the camera on the map, then tap "Next";
- ☐ tap "Yes" to confirm the location of the camera, or tap "No" to mark the location again on the map;
- ☐ enter the speed limit. The display will show a dedicated message.

REPORTING ALERTS FOR CAMERAS THAT ARE NOT LONGER THERE

Sometimes you may receive an alert for a camera that is no longer there.

To report an alert for a camera that is no longer there, do the following:



while you are being warned about the camera, tap this button. Then, confirm the presence of the speed camera.

Note You can only report an alert for a camera that is no longer there only while you are at the location.

TYPES OF FIXED SPEED CAMERA YOU CAN REPORT

When you report a speed camera at a later time, you can select the type of camera you are reporting.

These are the different types of fixed speed camera:

- ☐ **Fixed speed camera:** this type of camera checks the speed of passing vehicles and is fixed in one place;
- ☐ **Red light camera:** this type of camera checks for vehicles breaking traffic rules at traffic lights;
- ☐ **Toll road camera:** this type of camera monitors traffic at toll road barriers.
- ☐ **Other camera:** all other types of camera that do not fall into any of the above categories.

AVERAGE SPEED CHECK CAMERA ALERTS

You can set whether you want to be warned about the cameras at the start and end of an average speed check area.

To change the settings, tap "Alert settings" in the Speed Cameras menu.



As you approach the start of an average speed check zone, the display shows a visual warning in the "Driving View" with the distance to the camera underneath it and a warning sound will be played. A small icon on the road is also displayed showing the position of the average speed check camera at the start of the zone. During the zone, the visual warning continues to be shown in the "Driving View".

SPEED CAMERAS MENU

To open the Speed Cameras menu, tap "Services" in the Main Menu and then tap "Speed Cameras".



Report speed camera: tap this button to report a new speed camera location.



Alert settings: tap this button to set the alerts you will receive and the sounds used for each alert.



Disable alerts: tap this button to disable the alerts.

Enable report button: tap this button to enable the report button. The report button is shown in the "Driving View" or in the quick menu. When the report button is shown in the "Driving View", this button changes to "Disable report button".

MAP UPDATE

UPDATING THE SYSTEM'S MAP

The map can be updated in two different ways:

- ☐ *most recent maps guarantee*: if a new map is available for your system within 90 day of initial use, it can be downloaded once free of charge.
- ☐ *map update*: it is possible to purchase a new version of the map installed on your system.

To install an update for a map installed on your system, proceed as follows:

- ☐ prepare a SB device;
- ☐ install TomTom HOME and create a MyTomTom account, if this operation has still not been carried out;
- ☐ download the map;
- ☐ install the new map.

PREPARING A USB DEVICE

To update the map, a USB device that meets the following requirements must be used:

- ☐ ideally, the USB device should be empty;
- ☐ the USB device must have at least 8 GB of memory free;
- ☐ the USB must use a FAT-32 file system;
- ☐ the USB device must not be blocked and must allow files to be saved.

NOTE The use of a memory stick is recommended, while the use of mass storage devices, such as mobile phones or multimedia players, is not recommended.

To prepare a USB device, proceed as follows:

- ☐ ensure that the map you wish to update is active in the navigation system. If the navigation system has several maps and you wish to update a map which is not currently active, activate the map. To do this, select "Change map" in the "Settings" menu of the navigation application;
- ☐ select "Navigation updates" in the "Settings" menu (see fig. 38). You are asked whether you wish to prepare a USB device for downloading updates;
- ☐ select "Yes";
- ☐ insert the USB device (see fig. 39).

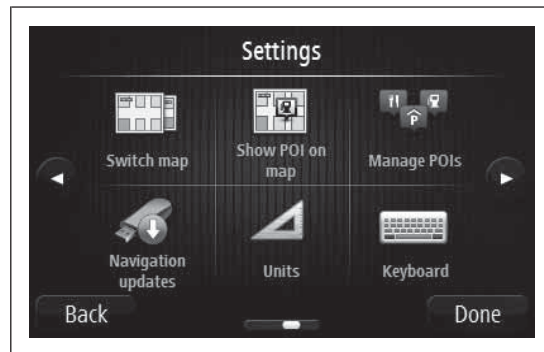 


fig. 38

F0Y1245

NOTES

- ❑ If the system continues to ask you to insert the USB device, check that the device meets the requirements indicated previously, then retry.
- ❑ If several USB devices are connected, the system asks you to remove some devices, so that the device you wish to prepare is the only one connected.
- ❑ If there isn't enough free space on the USB device, the system asks you to use another USB device.
- ❑ If you connect a USB device that contains files, the system warns you that they may be deleted from the device.

The system starts to prepare the USB device.

When the USB device is ready, the following message is displayed (see fig. 40).

Remove the USB device and connect it to the computer. The new map can now be downloaded to the USB device.

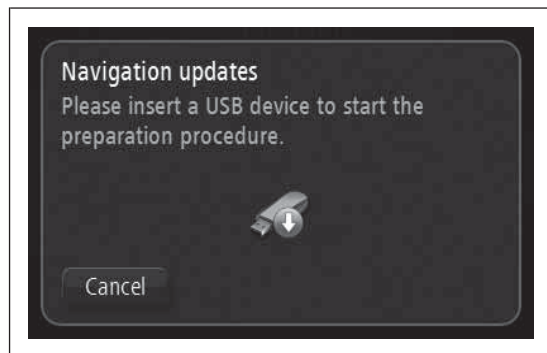 


fig. 39

F0Y1246



fig. 40

F0Y1247

TomTom HOME INSTALLATION

To install TomTom HOME and create a MyTomTom account, proceed as follows:

- ☐ download and install the TomTom HOME application on the computer. On the computer, access www.tomtom.com/getstarted. Select "Download TomTom HOME", then follow the instructions provided.
- ☐ connect the prepared USB device to the computer: TomTom HOME is launched automatically.
- ☐ select "Enter" in the top right corner of TomTom HOME fig. 41.
- ☐ select "Create account" and enter the required details to create a MyTomTom account. A MyTomTom account is required to receive map updates.

After the account is created, you are asked whether you wish to connect the Uconnect[™] system to your account. The USB device prepared represents the Uconnect[™] system.

- ☐ select "Connect device", then select "Close".

A map can now be downloaded to the USB device.



fig. 41

A0J1580

DOWNLOAD THE MAP

The map can be updated in two ways:

- ☐ *most recent maps guarantee*: if a new map is available for your system within 90 day of initial use, it can be downloaded once free of charge.
- ☐ *map update*: it is possible to purchase a new version of the map installed on the system.

To check availability or purchase a map, make sure that you have prepared a USB device and installed TomTom HOME on your computer.

Connect the USB device to the computer.

Selecting a map to download

To check whether you are entitled to download a free map update using the Most Recent Maps Guarantee, select "Tools", "Use most recent maps guarantee" in TomTom HOME.

To purchase a map update, select "Purchase maps" in TomTom HOME.

If an update has already been purchased, select "Update device" in TomTom HOME.

Downloading a map

If a map update is available for the system, this update is included in the list of updates available.

NOTE If the most recent map is already installed on the system, the update is not proposed.

Select the map that you wish to download, then select "Update and install" (see fig. 42).

The map is downloaded and copied to the USB device.

Select "Done" when the process is complete.

NOTE Don't disconnect the USB device from the computer while map downloading and copying is in progress.

The map can now be installed on the system.

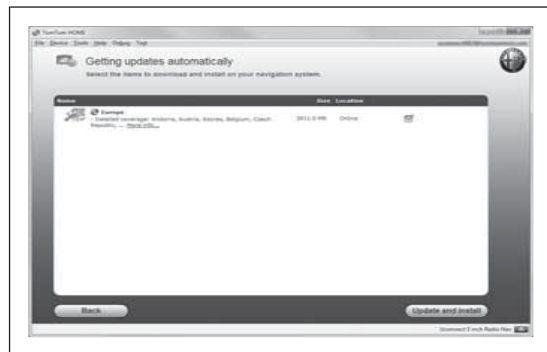 


fig. 42

A0J1581

INSTALLING THE MAP

After downloading a map to the USB device, it can be installed on the system.

Proceed as follows:

- ☐ insert the USB device containing the new map in the Uconnect™ system. The system detects a new map on the USB device. The USB device may also contain updated navigation software, if the new map requires it. You are asked whether you wish to update the system (see fig. 43);
- ☐ select "Start". If the USB device contains new software, the Uconnect™ system updates the navigation software first. After updating the software, the system must be restarted. Select "OK". Before updating the map, the system indicates that this process may take several minutes. Select "OK".
- ☐ the system starts updating the map.



fig. 43

F0Y1253

NOTE Do not remove the USB device and do not disconnect the system's power supply before the update is complete. The system cannot be used until the update is completed correctly. If the update is interrupted, start the system update again.

Once the map has been updated, the following message is displayed (see fig. 44).

- ☐ select "Close": the new map is now available on the system.

TROUBLESHOOTING

The following problems may occur during the update:

- ☐ the map on the USB device is not valid. In this case, download the map to the USB device again, using TomTom HOME. It may be necessary to prepare the USB device again;
- ☐ the version of the map on the USB device is the same as or is a previous version of the one already on the system. If this occurs, download the map to the USB device again, using TomTom HOME. It may be necessary to prepare the USB device again.

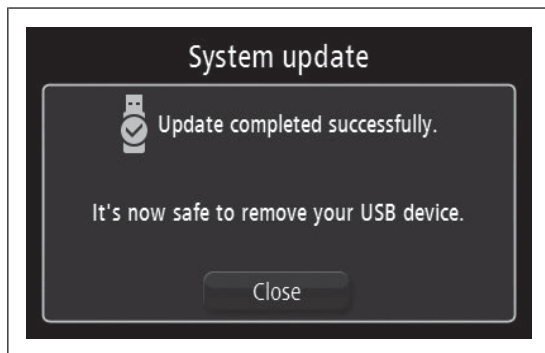 


fig. 44

F0Y1252

VOICE COMMANDS

INFORMATION ON VOICE COMMANDS

The TomTom navigation system uses voice commands for some or all of the following functions:

- ☐ driving information;
- ☐ warnings that you set.

Two types of voices are available during navigation:

- ☐ *computer voices*: they are generated by the navigation system. They read responses to voice commands and traffic;
- ☐ *human voices*: which have been recorded by an actor and provide instructions about the route.

VOLUME LEVEL ADJUSTMENT

The volume of the navigation system can be adjusted on the main unit.

Proceed as follows to activate/deactivate the navigation instructions:

- ☐ in the "Driving view": touch the central box of the status bar to activate the navigation instruction audio again (if previously deactivated);
- ☐ in the "Setting menu": touch "Settings" in the Main menu, then touch "Turn on/off voice guidance".

USE OF THE VOICE COMMANDS

Instead of touching the screen, voice can be used to give voice commands to the navigation system.

For example, just say "2D view" to switch to the 2D view.

To display the list of available commands, touch "Help" in the Main menu, then touch "What can I say?".

Please follow the suggestions below to be sure that the voice commands are always recognised by the system:


- ☐ speak at a normal volume;
- ☐ always wait for the "beep" before speaking;
- ☐ the system is capable of recognising the voice commands given, irrespective of gender, tone of voice and intonation of the person giving the instructions;
- ☐ if possible, try and keep the noise in the passenger compartment to a minimum;


- ❑ before giving voice commands, ask other passengers not to talk. This is to prevent misunderstanding since the system may recognise other words (in addition to or different from your voice command) if several people are speaking;
- ❑ for optimum operation, it is advisable to close the windows and the sun roof (for versions/markets, where provided) to avoid external interference;
- ❑ to guarantee correct operation of the voice commands for the connected mobile phone, make sure that the phonebook has been completely downloaded (or updated) by the **Uconnect™** system; usually 5-10 seconds after pairing the phone with the **Uconnect™** system are enough.

IMPORTANT Voice commands must always be given in safe driving conditions, in compliance with the laws in force in the country where you are driving.

USE OF STEERING WHEEL CONTROLS TO ACTIVATE VOICE COMMANDS

"Phone" button

 
The  button on the steering wheel controls enable to activate the "Phone" voice recognition system to make calls, display recent incoming and outgoing calls and phonebook, etc.

Every time the  button is pressed, there is a "beep" and the display shows a suggestion screen inviting the user to give a command.

"Voice" button


 
The  button on the steering wheel controls activates the "Radio/Media" voice recognition system to:

 

- ❑ tune to a specific radio station;
- ❑ tune to a specific AF/FM radio frequency;
- ❑ play a track on an USB storage device/iPod/CD MP3;
- ❑ play an album on an USB storage device/iPod/CD MP3.

Every time the  button is pressed, there is a "beep" and the display shows a suggestion screen inviting the user to give a command.

Quick use of voice interaction



 

 
The  or  buttons, when pressed during a system voice message, allow a voice command to be given directly.

For example, if the system is saying a help voice message and you know the command to be given to the system, pressing the  or  buttons the voice message is interrupted and you can give the wished voice command directly (without having to listen to the whole help voice message).

The  or  buttons, if pressed when the system is waiting for a voice command by the user, close the voice session.

VOICE SESSION STATUS

The system displays the voice session status with specific icons:

- ❑  (green icon): displayed when the system is listening. In this case you can give a voice command;
- ❑  (green icon): displayed when the system has interpreted the given voice command and its function is performed. In this case you cannot give a voice command;
- ❑  (yellow icon): displayed when the system is processing the given voice command. In this case you cannot give a voice command;
- ❑  (yellow icon): displayed when the system is saying a help, information or multiple choice voice message. In this case you cannot give a voice command;
- ❑  (red icon): displayed when the voice interaction is ended by the user. In this case you cannot give a voice command.

MULTIPLE CHOICE

In a few specific cases the system cannot define univocally the given voice command and asks for choosing among max. four alternatives.

For example, if you ask to call a name in the phonebook and there are similar names, the system will suggest a numerical list of the available alternatives (see fig. 45), asking you to say the associated number.

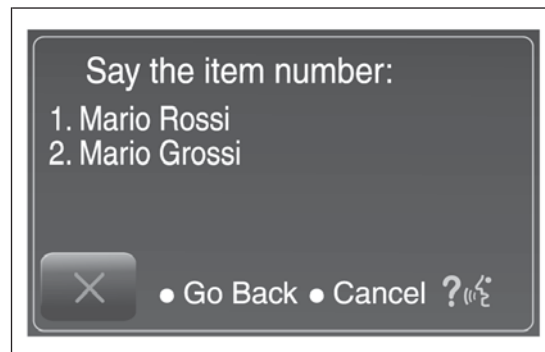 




fig. 45

F0Y1046

GLOBAL VOICE COMMANDS

Uconnect™ VOICE COMMANDS

GLOBAL voice commands

These commands can be given by any display after pressing control button  or  on the steering wheel, provided that there are no ongoing phone calls.

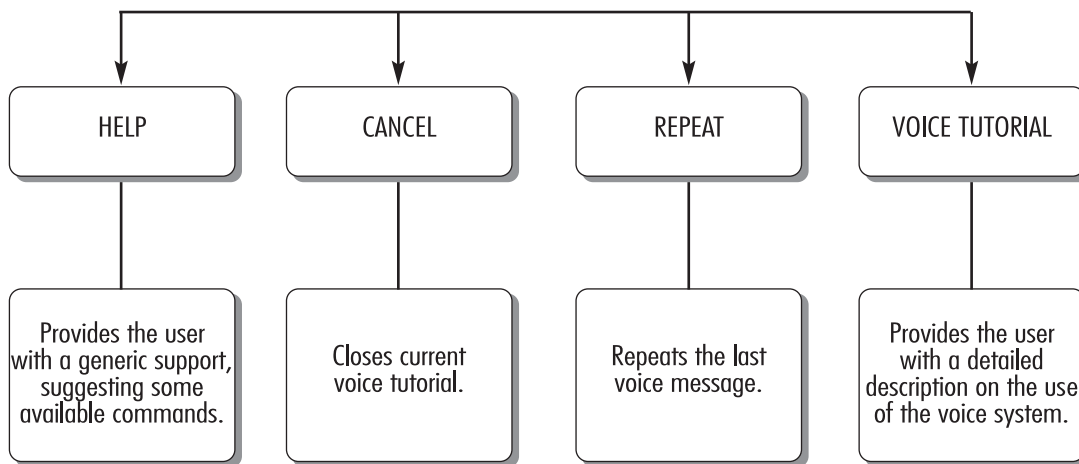 


fig. 46

A0J1560

PHONE VOICE COMMANDS

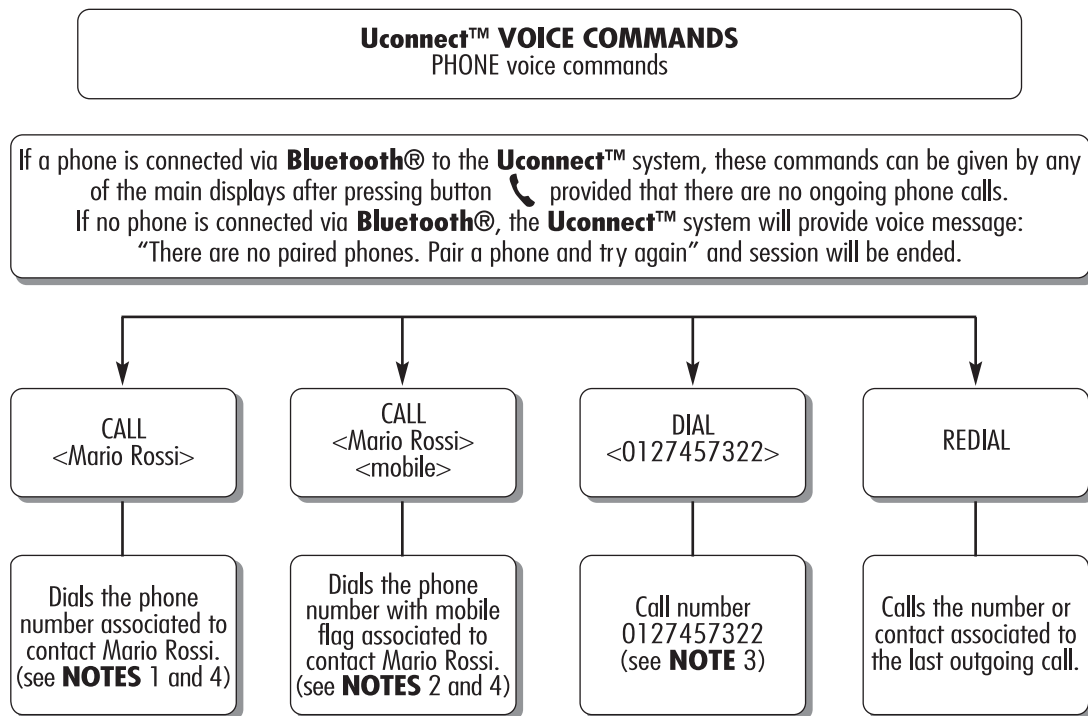 


fig. 47


continued ➞

 
A0J1561

follows ➡

Uconnect™ VOICE COMMANDS

PHONE voice commands

If a phone is connected via **Bluetooth®** to the **Uconnect™** system, these commands can be given by any of the main displays after pressing button  provided that there are no ongoing phone calls. If no phone is connected via **Bluetooth®**, the **Uconnect™** system will provide voice message: "There are no paired phones. Pair a phone and try again" and session will be ended.

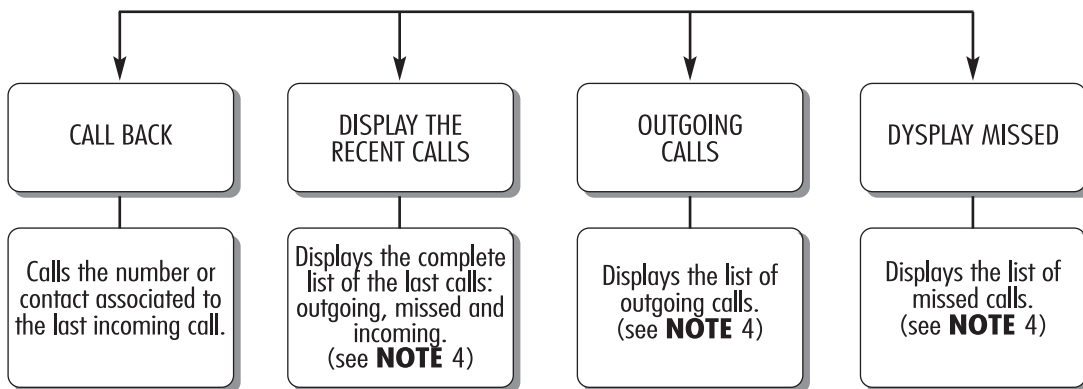

continued ➡

A0J1562

fig. 48

follows ➞

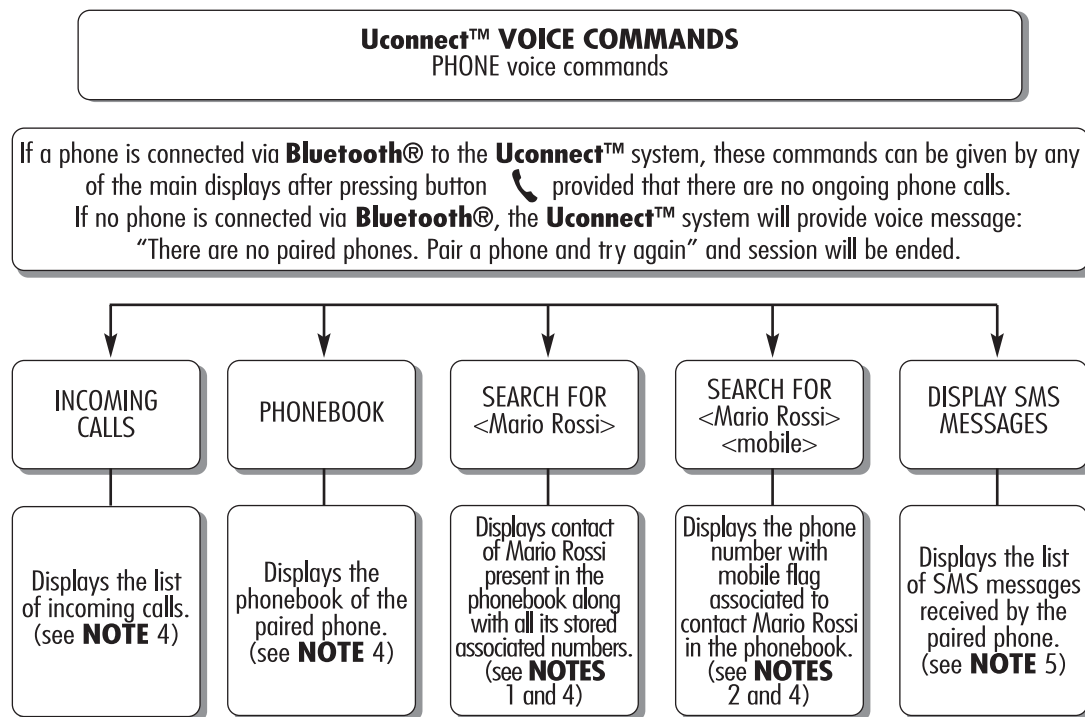 


fig. 49

A0J1563

Uconnect™ VOICE COMMANDS

PHONE voice commands

The commands can be spoken from any screen after pressing button  on the steering wheel.

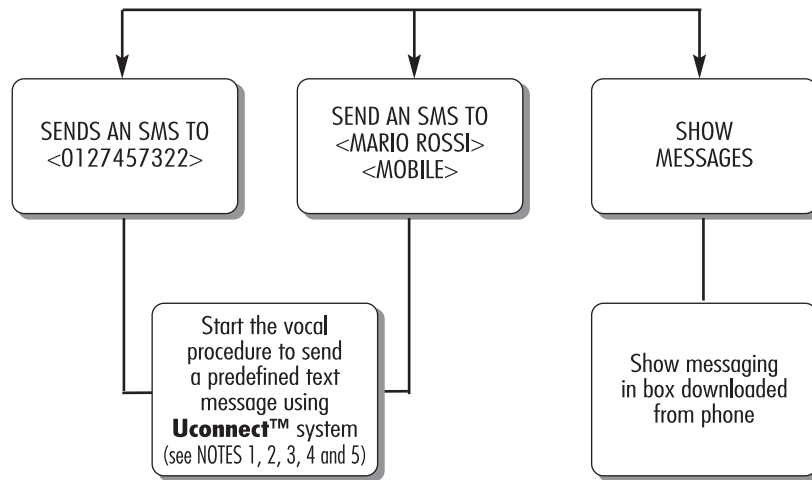 



fig. 50

A0J1575

Uconnect™ VOICE COMMANDS

HANDS-FREE CALLING voice commands

Available commands while phone call is in progress. The commands can be spoken from any screen while a call is active after pressing  button on the steering wheel.

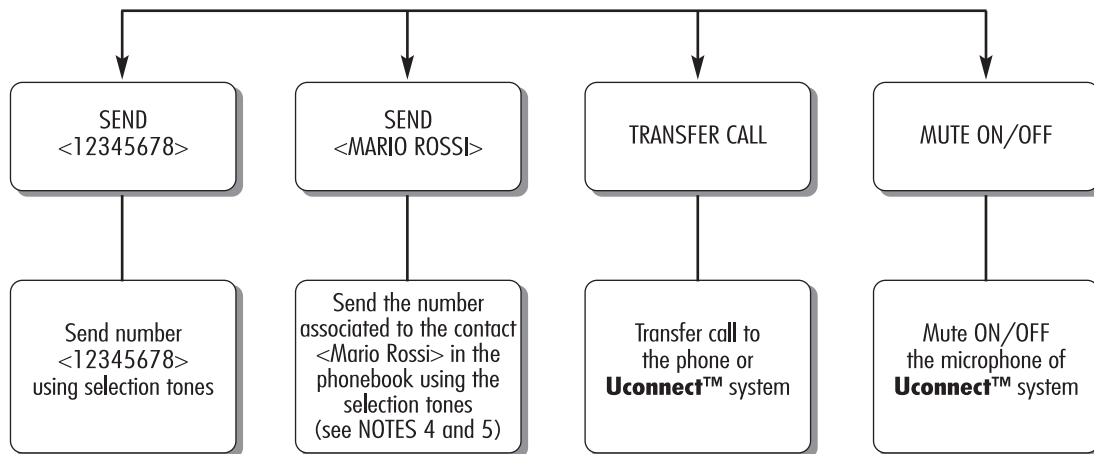 


fig. 51

A0J1576

NOTES

1. <Mario Rossi> can be replaced with any name in the phonebook of your mobile phone.

If the phone allows storing of <name> (Mario) and <surname> (Rossi) in two different fields, the following voice commands can be given:

CALL <Mario> <Rossi>

SEARCH FOR <Rossi> <Mario>

CALL <Rossi> <Mario>

SEND AN SMS TO <Mario>< Rossi>

SEARCH FOR <Mario> <Rossi>

SEND AN SMS TO <Rossi>< Mario>

2. <mobile> can be replaced with one of the 3 available flags: <home>, <office>, <other>.

If the phone allows storing of <name> (Mario) and <surname> (Rossi) in two different fields, the following voice commands can be given:

CALL <Mario> <Rossi> <mobile>

SEARCH FOR <Rossi> <Mario> <mobile>

CALL <Rossi> <Mario> <mobile>

SEND AN SMS TO <Mario>< Rossi> <mobile>

SEARCH FOR <Mario> <Rossi> <mobile>

SEND AN SMS TO <Rossi>< Mario> <mobile>

3. Phone number <0127457322> can be replaced with any other phone number.

4. This function is only available if the phone, connected via Bluetooth, supports download of the phonebook and of the last calls on the **Uconnect™** system and if the download (or update) of the phonebook has been completed; usually wait 5-10 seconds after pairing the mobile with the **Uconnect™** system.


5. This function is only available if the phone, connected via Bluetooth® to the **Uconnect™** system, supports SMS message voice reading function.

fig. 52

A0J1574

RADIO AM/FM/DAB VOICE COMMANDS

Uconnect™ VOICE COMMANDS RADIO AM/FM/DAB voice commands

These commands can be given by any main display after pressing control button  on the steering wheel, provided that there are no ongoing phone calls.

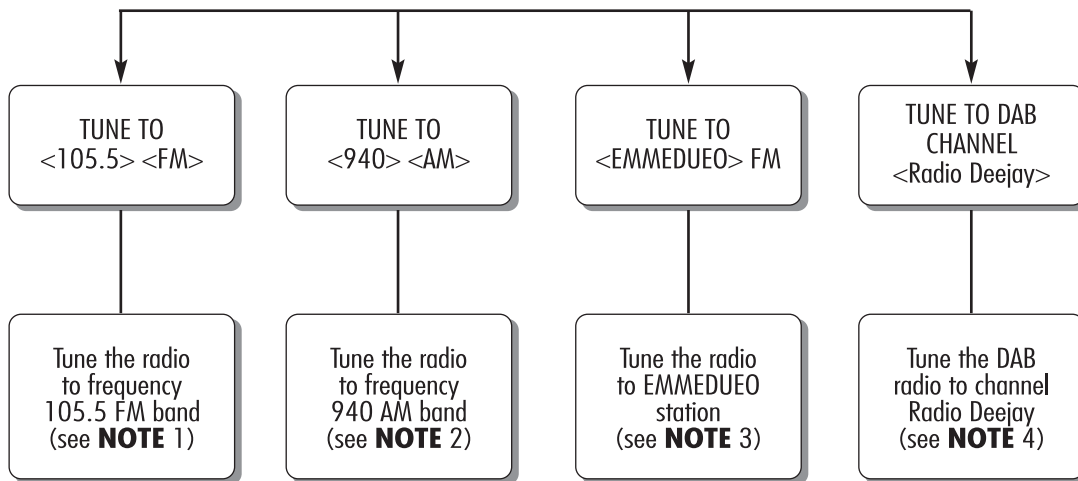 


fig. 53

A0J1565

 
NOTES

1. <105.5> can be replaced with any other available frequency of the FM band.
2. <940> can be replaced with any other available frequency of the AM band.
3. <EMMEDUEO> can be replaced with any other name of FM station received by the radio.
Not all the radio stations provide this service.
4. <Radio DeeJay> can be replaced with any other DAB channel name received by the DAB radio.
Not all the DAB channels provide this service.

fig. 54

A0J1566

MEDIA VOICE COMMANDS

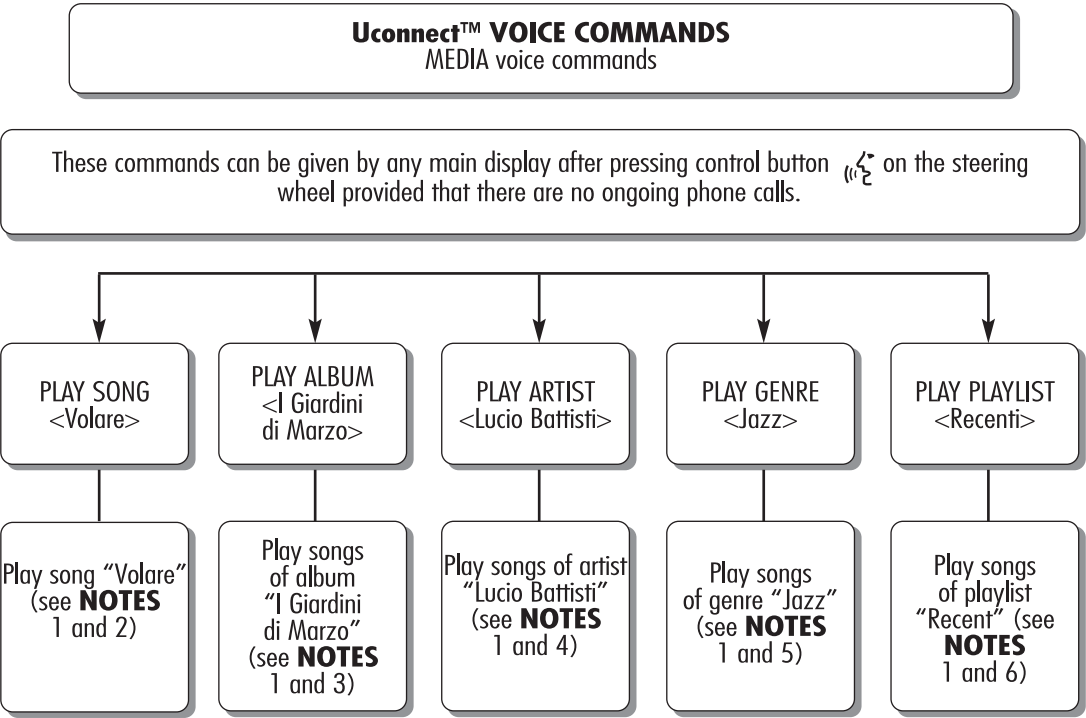

continued ➞
A0J1567

fig. 55

follows ➡

Uconnect™ VOICE COMMANDS

MEDIA voice commands

These commands can be given by any main display after pressing control button  on the steering wheel provided that there are no ongoing phone calls.

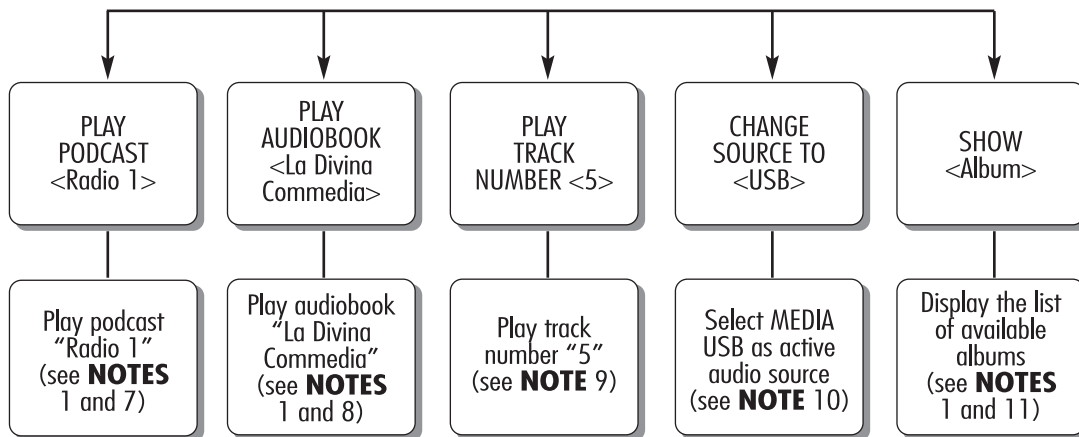 


fig. 56

A0J1568

NOTES

1. Multimedia files stored in MEDIA sources (USB memory stick, iPod via USB, MP3 CD) should have information about songs correctly set (song title, artist, album, genre, podcast, audiobook) otherwise they will not be available via voice commands.
2. <Volare> can be replaced with any other title of a song available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
3. <I Giardini di Marzo> can be replaced with any other title of an album available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
4. <Lucio Battisti> can be replaced with any other name of an artist available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
5. <Jazz> can be replaced with any other genre available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
6. <Recent> can be replaced with any other name of a playlist available in the MEDIA source (available on USB memory stick, iPod via USB, MP3 CD) inserted and active.
7. <Radio 1> can be replaced with any other name of a podcast available in the MEDIA source (available on iPod via USB) inserted and active.
8. <La Divina Commedia> can be replaced with any other title of an audiobook available in the MEDIA source (available on iPod via USB) inserted and active.
9. <5> can be replaced with any track number available in the MEDIA source (available on audio CD) inserted and active.
10. <USB> can be replaced with any other MEDIA source: "USB", "iPod", "CD", "AUX" and "Bluetooth".
11. <Album> can be replaced with any other category:
 - "Songs", "Artists", "Albums", "Genres", "Playlists" (available on USB memory stick, iPod via USB, MP3 CD)
 - "Folders" (available on USB memory stick, MP3 CD)
 - "podcasts", "audiobooks" (available on iPod via USB).

fig. 57

A0J1569

NAVIGATION VOICE COMMANDS

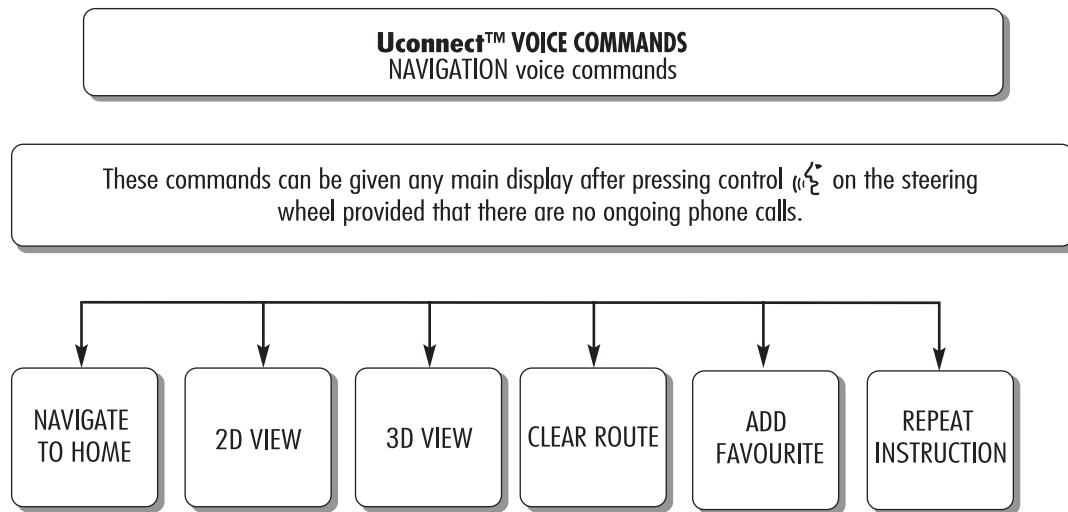 


fig. 58

A0J1573

CUSTOMER SERVICE NUMBER LIST

The following table shows the specific Customer Service numbers for each country.

Country	Universal Freephone Number	National Freephone Number	Toll number
Austria	00800.2532.0000		+39.02.4441.2042
Belgium	00800.2532.0000 (*)	0800 55666	+39.02.4441.2042
Denmark	00800.2532.0000 (*)	80 608900	+39.02.4441.2042
France	00800.2532.0000	0800 253200	+39.02.4441.2042
Germany	00800.2532.0000	0800 2532000	+39.02.4441.2042
Greece		80011500800 (*)	+30 210 99 88 542
Ireland	00800.2532.0000	1800253200	+39.02.4441.2042
Italy	00800.2532.0000	800253200	+39.02.4441.2042
Luxembourg	00800.2532.0000 (*)	800 28666	
Morocco		0801 001920	
The Netherlands	00800.2532.0000		+39.02.4441.2042
Poland	00800.2532.0000		+39.02.4441.2042
Portugal	00800.2532.0000		+39.02.4441.2042
United Kingdom	00800.2532.0000		+39.02.4441.2042
Spain	00800.2532.0000	900 253200	+39.02.4441.2042
Sweden	00800.2532.0000 (*)	020100501	+39.02.4441.2042
Switzerland	00800.2532.0000	0800 253200	+39.02.4441.2042

(*) This number is not available for some mobile system operators.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.









SERVICE

PARTS & SERVICES

TECHNICAL SERVICES – SERVICE ENGINEERING

Largo Senatore G. Agnelli, 3 – 10040 Volvera – Torino (Italia)

Fiat Group Automobiles S.p.A.

Publication no. 60438703 – 1 Edition – 03/2014

All rights reserved. Reproduction, even in part is prohibited without written permission from Fiat Group Automobiles S.p.A.

ENGLISH

Alfa Services

